



Panasonic

Combination VCR Operating Instructions

Models No. PV-C1320 / PV-C1330W
PV-C1340 / PV-C1350W



As an **ENERGY STAR**® Partner,
Matsushita Electric Corporation of
America has determined that this
product or product model meets the
ENERGY STAR® guidelines for
energy efficiency.



Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.
Spanish Quick Use Guide is included. (Guía para rápida consulta en español está incluida.)

For assistance, call 1-800-211-PANA(7262)

LSQT0189A

Getting Started

Basic Operation

Advanced Operation

For Your Information

Important Safeguards and Precautions

READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON UNIT

INSTALLATION

1 POWER SOURCE CAUTION

Operate only from power source indicated on unit or in this manual. If uncertain, have your Electric Utility Service Company or Video Products Dealer verify your home power source.

2 POWER CORD PLUG

For safety, this unit has a polarized type plug (one wide blade), or a three-wire grounding type plug. Always hold the plug firmly and make sure your hands are dry when plugging in or unplugging the AC power cord. Regularly remove dust, dirt, etc. on the plug.

POLARIZED PLUG CAUTION:

The plug fits into outlet one way. If it cannot be fully inserted, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not tamper with the plug.

GROUNDING PLUG CAUTION:

The plug requires a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not tamper with the plug.

3 POWER CORD

To avoid unit malfunction, and to protect against electrical shock, fire or personal injury:

- Keep power cord away from heating appliances and walking traffic. Do not rest heavy objects on, or roll such objects over the power cord.
- Do not tamper with the cord in any way.
- An extension cord should have the same type plug (polarized or grounding) and must be securely connected.
- Overloaded wall outlets or extension cords is a fire hazard.
- Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified electrician.

4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If blocked, heat build-up may result in a fire hazard or heat damage to cassettes.

For your protection:

- Never cover ventilation slots while unit is ON, or operate unit while placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless properly ventilated.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place unit over or near a heater or regulator, in direct sunlight, etc. If unit is suddenly moved from a cold place to a warm place, moisture may condense in unit and on the tape causing damage.

6 TO AVOID PERSONAL INJURY

- Never place unit on support or stand that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- Move any appliance and cart combination with care. Quick stops, excessive force, and uneven surfaces may cause objects to overturn.
- Carefully follow all operating instructions.




OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION

An outside antenna or cable system must be properly grounded to provide some protection against built up static charges and voltage.

Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information

regarding proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

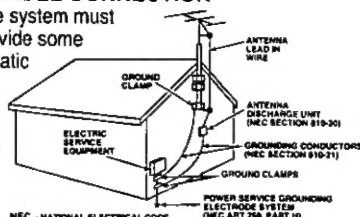

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

Locate an outside antenna system well away from power lines and electric light or power circuits so it will never touch these power sources should it ever fall. When installing antenna, absolutely never touch power lines, circuits or other power sources as this could be fatal.

USING THE UNIT

Before unit is brought out of storage or moved to a new location, refer again to the INSTALLATION section of these safeguards.

1 KEEP UNIT WELL AWAY FROM WATER OR MOISTURE, such as vases, sinks, tubs, etc.

2 IF EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug unit and have it inspected by a qualified service technician before use.

3 ELECTRICAL STORMS

During a lightning storm, or before leaving unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN UNIT IS PLUGGED IN

- DO NOT OPERATE IF:
 - liquid has spilled into unit.
 - unit was dropped or otherwise damaged.
 - unit emits smoke, malodors, or noises.
- Immediately unplug unit, and have it inspected by a service technician to avoid potential fire and shock hazards.
- Never drop or push any object through openings in unit. Touching internal parts may cause electric shock or fire hazard.
- Keep magnetic objects, such as speakers, away from unit to avoid electrical interference.

5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING UNIT

Unplug unit. Use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into unit and cause electrical shock. Any substance, such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE PRODUCT YOURSELF

If, after carefully following detailed operating instructions, the unit does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug unit and contact a qualified service technician.

2 REPLACEMENT OF PARTS

Make sure the service technician uses only parts specified by the manufacturer, or have equal safety characteristics as original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 SAFETY CHECK AFTER SERVICING

After unit is serviced or repaired, request that a thorough safety check be done as described in the manufacturer's service literature to insure video unit is in safe operating condition.

Safety Precautions/Mesures de sécurité

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Avertissement: Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment.

Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

FCC WARNING: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

To

Start!

Important Safeguards and Precautions ... 2

Before Using 6

- Accessories 6
- Loading the Batteries 6
- Record/Playback Time ... 6
- Prevent Accidental Tape Erasure 6

Use

Now!

TV Operation 10

(Main Operation, Using the 100 Key, Rapid Tune, Audio Mute, Phones, SELF-DEMO Mode)

Picture Adjustment 11

Enjoy

more!

Timer Recording 14 ~ 15

(Main Operation, Cancel, Replace or Clear Program Contents)

TV Timer Features 16 ~ 17

- ON-TIMER with Alarm 16
- SLEEP TIMER 17
- INSTANT ALARM 17

Closed Caption System 18 ~ 19

- Closed Caption Mode Feature 18
- Caption On Mute Feature 19

FM Radio 20 ~ 21

- FM Radio Setup 20
- FM ANTENNA Setup 20
- Using FM Radio 21

Other

Information!

Reset Language, Channels, Clock ... 36

Unit Information 38

On-Screen Display (OSD) 39

Spanish Quick Use Guide .. 40 ~ 42

Connections	7
• Outdoor Antenna Connections	7
• DSS/Cable box Connections	7
One Time Setup	8 ~ 9
(Language, Channel, Clock)	
Playback a Tape	12
(Main Operation, Forward or Reverse Search, Still Picture, Slow Motion, Frame by Frame Advance, Features for a Quality Picture)	
Record On a Tape	13
(Main Operation, One Touch Recording (OTR), Selecting Input Mode)	
Tape Operation	22 ~ 25
• Commercial Skip	22
• Program End Search	22
• Repeat Play	23
• Zero Search	23
• Auto Operation Functions	23
• VHS Index Search System	24, 25
Special VCR Features	26 ~ 30
• Channel Caption	26, 27
• Time Stamp	28, 29
• Weak Signal Display ON/OFF	30
• VCR Lock	30
Copy Your Tapes (Dubbing)	31
V-Chip Control Feature	32 ~ 35
• Enter Secret Code	32
• Setup US TV PROGRAMS Ratings ...	34
• Setup US MOVIES Ratings	33
• Blocking Message	35
Before Requesting Service	43
Service Center List	44
Warranty	45
Location of Controls	46 ~ 47


Before Using

Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your unit.


Date of Purchase _____
 Dealer Purchased From _____
 Dealer Address _____
 Dealer Phone No. _____
 Model No. _____
 Serial No. _____

Accessories

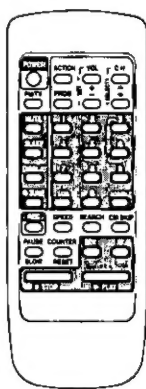

- ☐ Remote Control
 LSSQ0221
 (PV-C1320/PV-C1340)
 LSSQ0226
 (PV-C1330W/PV-C1350W)

- ☐ Batteries
 2 "AA"
-

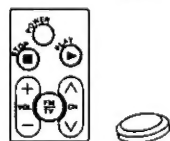


- ☐ Kitchen (Easy-Find™)
 Remote(VSQS1572)
 with one CR2025 Battery

<For model PV-C1350W only>

- The Kitchen remote control has been loaded with battery.


To order accessories,
 call toll free 1-800-332-5368.

Loading the Batteries

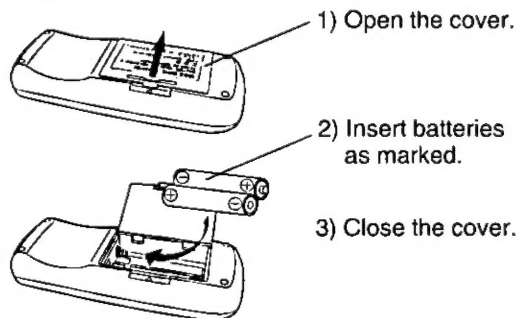

☐ Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

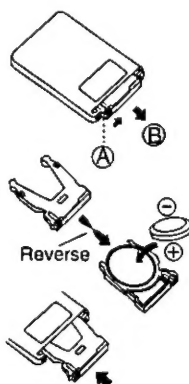

Kitchen (Easy-Find™) Remote Control <For model PV-C1350W only>

- While pressing the stopper tab, pull the Battery Tray out.
- Insert the battery into the Battery Tray with the + mark facing down. Do not reverse the polarity.
- Replace the Battery Tray.

Replace battery with Panasonic PART NO. VSBW0004 (CR2025) only. Use of another battery may present a risk of fire or explosion. Caution-battery may explode if mistreated. Dispose of used battery promptly. Keep away from children. Do not recharge, disassemble or dispose of in fire.


Record/Playback Time

Only use tapes with the **VHS** mark in this unit.


Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

Prevent Accidental Tape Erasure

Break off the tab to protect.

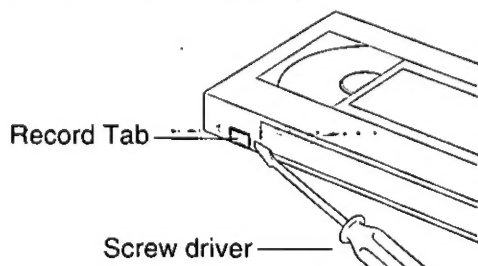

To record again.

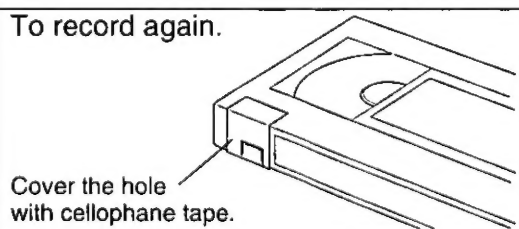


Outdoor Antenna Connections

Unhook the antenna from your previous TV or VCR and connect it to the back of the unit as shown in the diagram.

If your antenna system has separate UHF and VHF lead-ins, you need a UHF/VHF Band Mixer (not supplied.)

WARNING:

When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

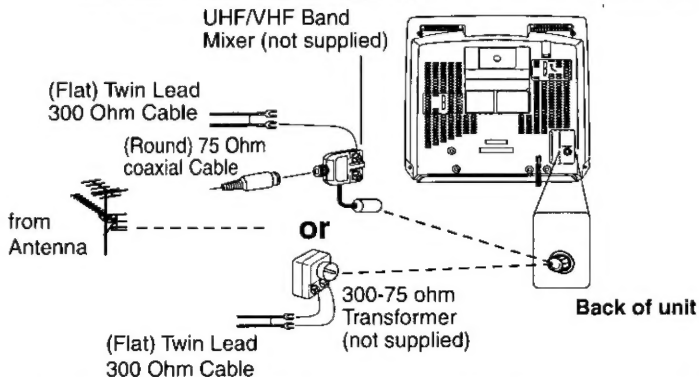

DSS/Cable box Connections


Without a Cable Box

You can;

- record or view unscrambled channels.

You cannot;

- record or view scrambled channels.
- view a channel other than the one selected for any type of recording.

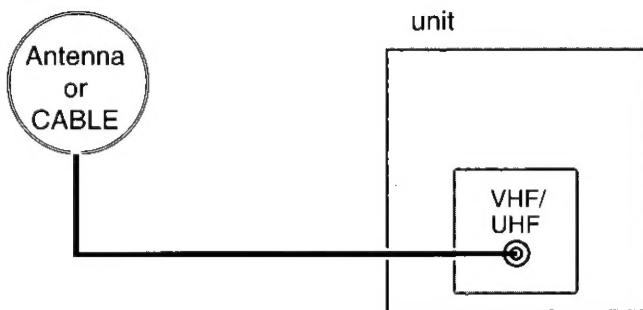

With a Cable Box

You can;

- record or view any channel including scrambled channels.


NOTE: Channel selection must be made at the cable box.

You cannot;

- view a channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the cable box.

Note to CABLE System Installer

This reminder is provided to call the CABLE (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

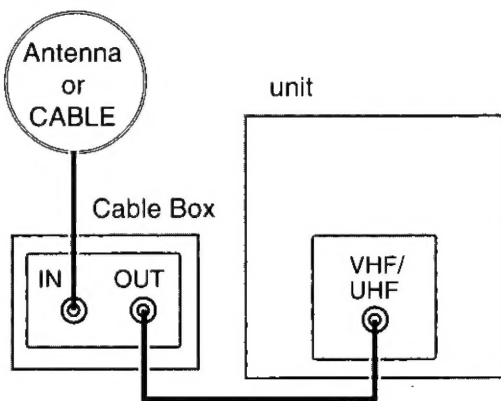

With a DSS Receiver

You can;


- record or view any channel including scrambled channels.

NOTE: Channel selection must be made at the DSS Receiver.

You cannot;

- view a channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the DSS box.


NOTE: The DSS receiver must be turned off to view programs from a cable box or antenna. See the DSS manual for details.

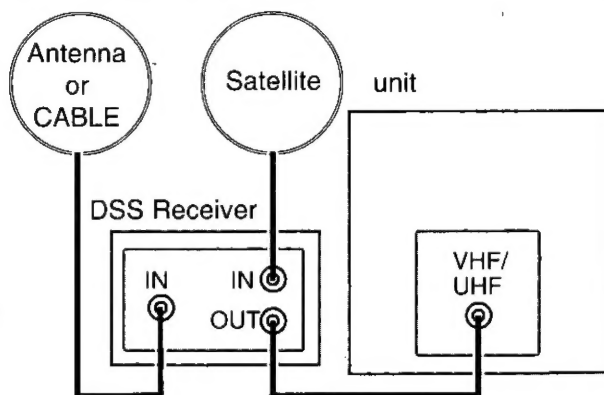

One Time Setup


When the unit is turned on the first time, setup mode is entered automatically.

1

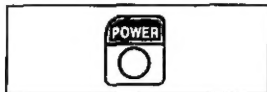


Press **POWER** on the remote or unit.

2

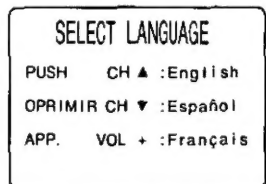


Select the language.



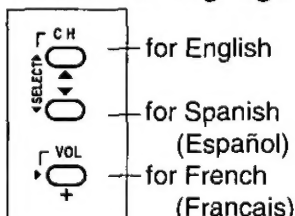


- If wrong language is set, complete "Reset all unit Memory Functions" steps page 39.
- If you use a cable box, it must be left on.



3

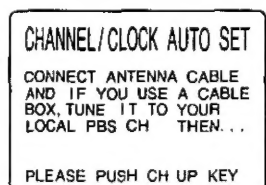

Start Channel Auto Set and Clock Auto Set.

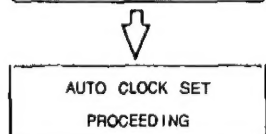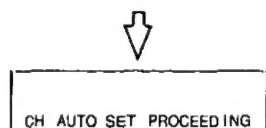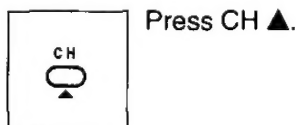


Case 1 (Setup completed)

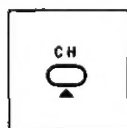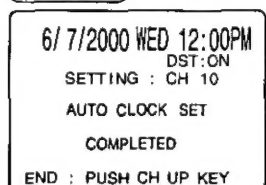

Press **CH ▲** to exit.
 • If your area observes daylight saving time, but you would like to turn the DST feature off, complete the "To Set or Reset the Clock" step on page 37 and set DST: OFF.

- If your area observes daylight saving time and DST is set to ON, but the time is incorrect; complete the Time Zone Adjust steps on the next page.


Case 2 (Setup incomplete)

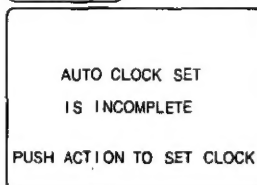

See **Case 2** next page.

Process of Setup

Language ⇒ channel ⇒ Clock

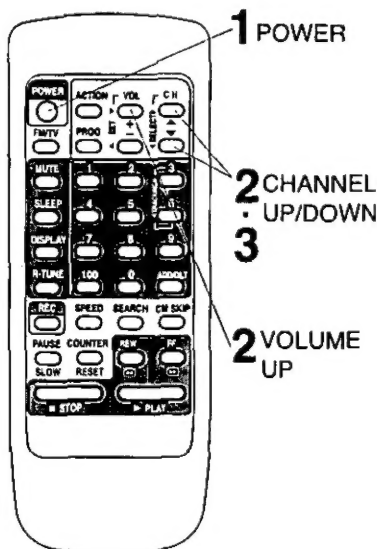



IMPORTANT NOTE FOR AUTO CLOCK SET


- Auto clock set is performed the first time when the unit is turned off each day. If used, a cable box must be left on and tuned to the PBS channel at the time the unit power is turned off if you want auto clock set to be done.
- If using a DSS receiver, it must be turned off for auto clock set.
- If a Cable Box or DSS receiver is connected to the unit via Audio/Video Jacks, an RF coaxial cable must also be connected for auto clock set and channel auto set features.
- If for any reason the time is changed manually, automatic time correction will not occur.

Case 1 Set TIME ZONE ADJUST.



1  **ACTION**
Press ACTION.

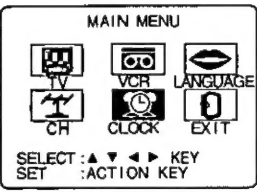
2  **Display SET CLOCK screen.**
1) Press $\blacktriangle \blacktriangledown \blacktriangleleft \blacktriangleright$ to select "CLOCK"
2) Press ACTION to display.

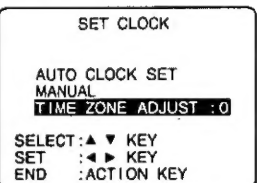3  **Select TIME ZONE ADJUST.**
1) Press $\blacktriangle \blacktriangledown$ to select.
2) Press $\blacktriangleleft \blacktriangleright$ to subtract or add hour(s) as necessary.

4  **ACTION**
End setup.
Press ACTION twice.
•TIME ZONE ADJUST returns to "0" if clock is set manually.

Case 2 Clock Setup is Incomplete Set the clock manually.

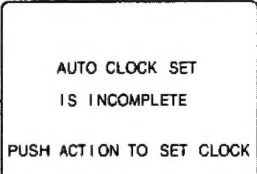
a  **Display SET CLOCK screen.**
 **ACTION**
Press ACTION to exit this mode.

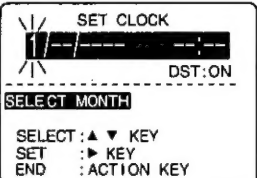b  **Set the clock manually.**
1) Press $\blacktriangle \blacktriangledown$ to select the month.
2) Press \blacktriangleright to set.

• Likewise set date, year, time, and DST (Daylight Saving Time.)

To Make Corrections,
repeatedly press $\blacktriangleleft \blacktriangleright$ to move to error, then correct.

C  **ACTION**
End setup.
Press ACTION twice
(Clock starts.)

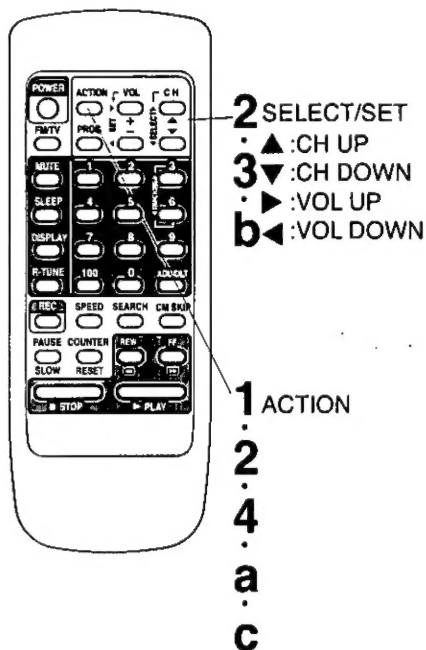
**Notes**

- This unit's calendar is accurately maintained up to Dec. 31, 2089, 11:59 PM.
- Channel auto set selects normal TV or Cable channels depending on your unit hookup.


ACTION key on the unit

You can operate the menu screen using unit buttons.
To display the menu, press STOP/EJECT and REW together with no tape inserted.

To exit the menu, repeat above with or without tape inserted.

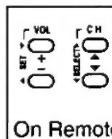Using $\blacktriangle \blacktriangledown \blacktriangleleft \blacktriangleright$ keys


\blacktriangle : CH UP
 \blacktriangledown : CH DOWN
 \blacktriangleright : VOLUME UP
 \blacktriangleleft : VOLUME DOWN

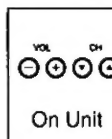

Whenever the menu or program screen is displayed, CHANNEL UP/DOWN function as $\blacktriangle \blacktriangledown$ and VOLUME UP/DOWN function as $\blacktriangleleft \blacktriangleright$ only.

TV Operation

1

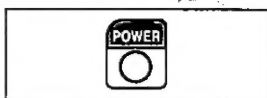


Press **POWER** on the remote or unit.




Check list before you begin.

- ☐ All connections are made. (See page 7.)
- ☐ Your unit is plugged in.

2

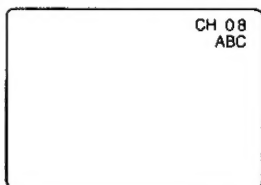


Select a channel.

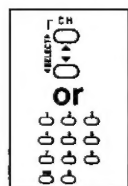


Using **CH ▲▼** or **NUMBERED** keys.


Models PV-C1320/1330W/1340 unit is shown here.

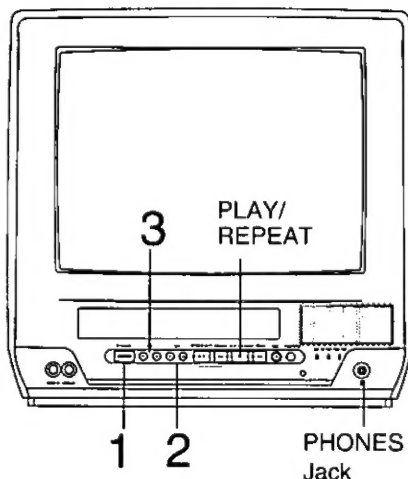

3

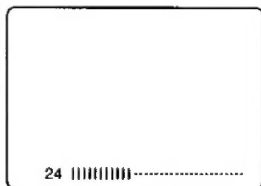

Adjust volume.

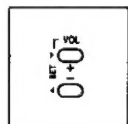

Press **VOL + -**.

■ Using the 100 key

When selecting **CABLE** channels 100 to 125 with the **NUMBERED** keys, first press the 100 key, and then enter the remaining two digits.

■ Rapid Tune

Press **R-TUNE** to display the last channel you were watching.

■ Audio Mute


Press **MUTE** to instantly mute the sound.
Press again, to restore the previous sound level.

■ Phones


Connect an earphone (not supplied) or headphones (not supplied) to the **Phones Jack**.

■ SELF-DEMO Mode


With **Power ON**, hold down **PLAY/REPEAT** on the unit for 5 seconds to display demo screen.
Repeat this to exit.

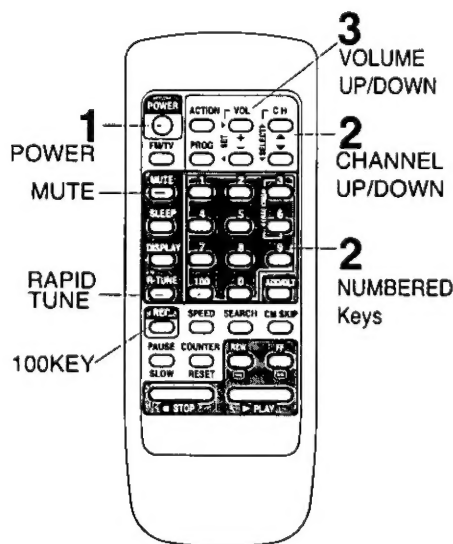


Picture Adjustment

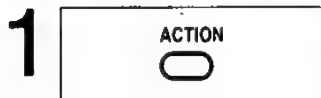


Display MAIN MENU.
Press ACTION.

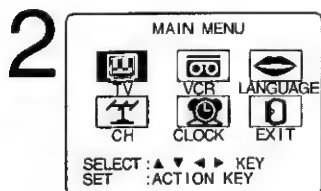


Display SET UP TV screen.

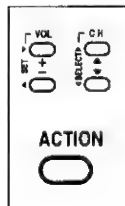


- 1) Press ▲▼◀▶ to select "TV."
- 2) Press ACTION to display.

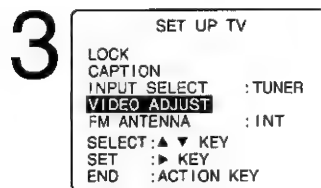


Display VIDEO ADJUST screen.

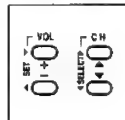


- 1) Press ▲▼ to select.
- 2) Press ▶ to display.

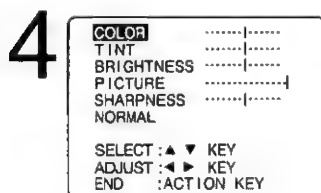

Adjust desired item.

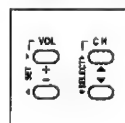


- 1) Press ▲▼ to select an item. (See below right.)
- 2) Press ◀▶ to adjust.

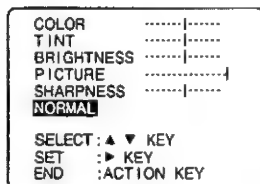


To Reset Picture Controls.

Press ▲▼ and ▶ to select and set "NORMAL."
All controls return to their factory settings.

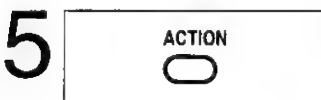

End setup.
Press ACTION three times to exit.

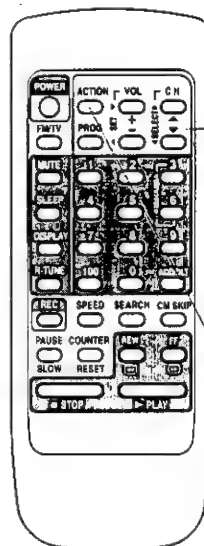


- 2 SELECT/SET
- 3 ▲:CH UP
- 4 ▼:CH DOWN
- 5 ▶:VOL UP
- 6 ◀:VOL DOWN

Basic Operation

Picture Adjustment

- **COLOR Control**
Adjust color intensity.
- **TINT Control**
Adjust for natural flesh tones.
- **BRIGHTNESS Control**
Adjust picture brightness.
- **PICTURE Control**
Adjust picture intensity by adjusting both contrast and color level in the proper balance.
- **SHARPNESS Control**
Adjust picture sharpness.


Models PV-C1320/1330W/1340 unit is shown here.

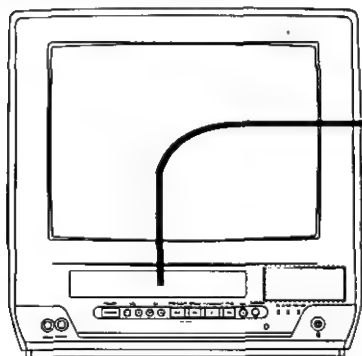

☒ Check list before you begin.

- ☐ All connections are made. (See page 7.)
- ☐ Your unit is plugged in.

1

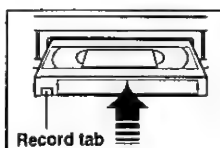


Insert a cassette.

- The unit power comes on automatically.

Note

To prevent tape jam

Inspect your cassette tapes and remove any loose or peeling labels.

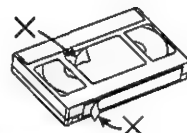

2



Press PLAY.

- Playback begins if cassette has no record tab.

■ To Find a Particular Scene

Forward Search → Press FF

(To release, press PLAY or FF)

Reverse Search → Press REW

(To release, press PLAY or REW)

■ To view a Still (Freeze) picture →

Press PAUSE/SLOW (To release, press PLAY)

■ To view in Slow Motion →

Press and hold PAUSE/SLOW in the Still mode
(To release, press PLAY)

■ To view Frame by Frame Advance →

Press PAUSE/SLOW in the Still mode (To release, press PLAY)

Note


After the unit is in Still or Slow mode for 3 minutes, it will switch to Stop mode automatically to protect the tape and the video head.

■ To stop → Press STOP


■ To rewind tape → Press REW in Stop mode

■ To fast forward tape → Press FF in Stop mode

■ To eject tape → Press STOP/EJECT on the unit

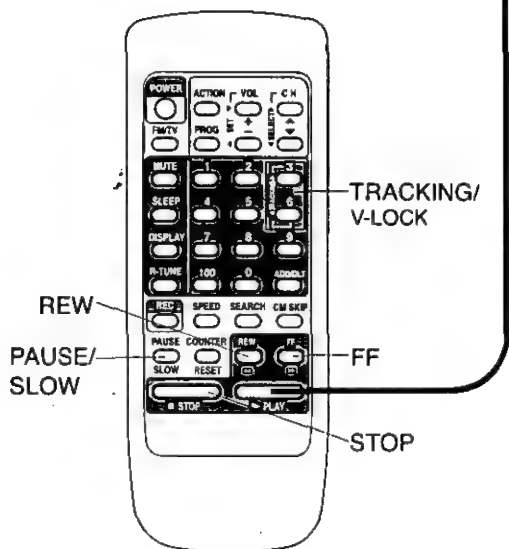

You can operate on the unit
<Models PV-C1320/1330W/1340 unit is shown here.>

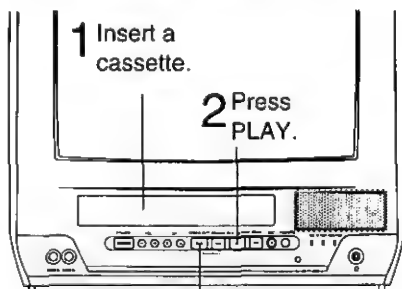

■ Press to stop and/or eject tape.

Features for a Quality Picture

Digital Auto Tracking

Continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise. Press the 3 or 6 NUMBERED key on the remote control or CH▲▼ on the unit until the picture clears up. To return to Auto Tracking, press POWER off, then on again a few seconds later.


V-Lock Control

<For Models PV-C1340/1350W only>

In Still mode, the 3 or 6 NUMBERED key on the remote control or CH▲▼ on the unit operate as a V-Lock control to reduce jitter.

Record On a Tape


Models PV-C1320/1330W/1340 unit is shown here.

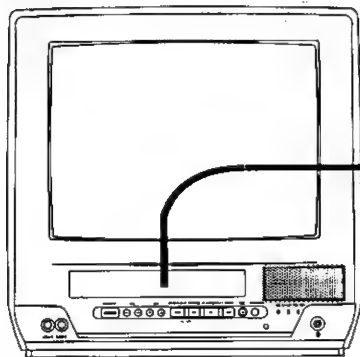

Check list before you begin.

- ☐ All connections are made. (See page 7.)
- ☐ Your unit is plugged in.
- ☐ Cassette with record tab in place.


1

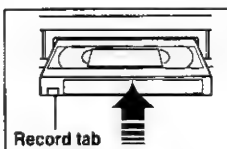

Insert a cassette.

- The unit power comes on automatically.

2

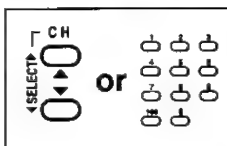


Select Channel.

Press CH ▲▼, or
NUMBERED keys.

- To select "LINE," see bottom of this page.

3

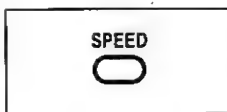

Select Recording speed (see page 6.)

Press SPEED.

SP = Standard Play

LP = Long Play

SLP = Super Long Play

- Selected speed is displayed.


4



Start Recording.

Press REC.

- To edit out unwanted portions, press PAUSE to pause and resume recording.
- You cannot view another channel during recording.

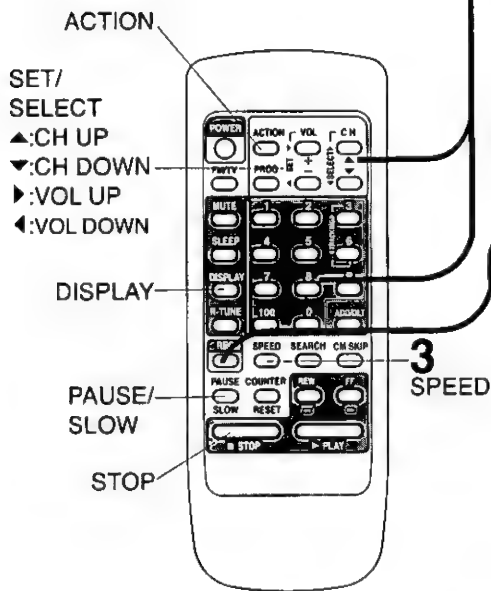


■ To stop → Press STOP

■ One Touch Recording (OTR)

Press REC repeatedly to set the recording length (30 min - 4 hours.)


- The unit stops recording at a preset time.
- PROG TIMER indicator lights on the unit.

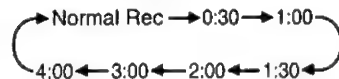

Selecting Input Mode

Method 1:

Press CH▲▼. The display will change as follows.

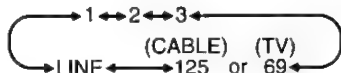

Method 2:

a Press ACTION for MAIN MENU.

b Press ▲▼◀▶ to select "TV", then press ACTION for SET UP TV screen.

c Press ▲▼ to select "INPUT SELECT," and then press ▶ to select "TUNER" or "LINE."


d Press ACTION twice to exit this mode.

Notes

- After the unit has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and video head.
- The remaining recording time of an OTR can be displayed by pressing DISPLAY.

You can operate on the unit


<Models PV-C1320/1330W/1340 unit is shown here.>

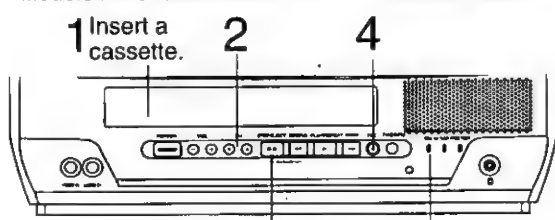


■ Press to stop. REC Indicator

Timer Recording


You can set up to 8 programs to be recorded while you are away.

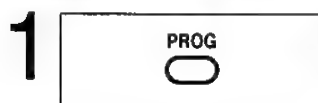

Display PROGRAM screen.
Press PROG.

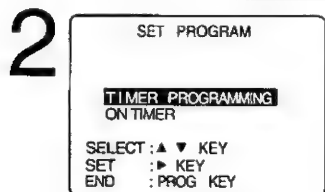

Select TIMER PROGRAM.

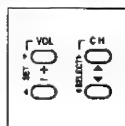


- 1) Press ▲▼ to select.
- 2) Press ► to display.

• If a program is already in memory, press ▲▼, and ► to select an unused program number.




Set the recording DATE.

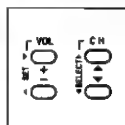

- 1) Press ▲▼ to select.
- 2) Press ► or ◀ to set.

- 1-31 = One time
- DAILY = MON-FRI
- WEEKLY SUN-SAT = Same time once a week

Example

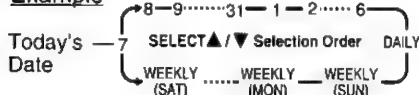


Repeat step 3 to set:

- start time, stop time
- Channel (or LINE for outside source)
- Category [N/A (not applicable), SPORTS, MOVIE, COMEDY, MUSIC, DRAMA]
- Speed (SP, LP, SLP)




Make the notes.

(If not wanted, go to step 5.)

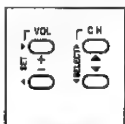

- 1) Press ▲ to begin.
- 2) Press ▲▼ to select.
- 3) Press ► or ◀ to set.
- 4) Press PROG (or ACTION) to end.

- Characters will change in the following order.

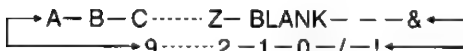


Notes

- 2 minutes before Timer recording is performed, "PLEASE PREPARE FOR TIMER REC" appears and/or the PROG TIMER indicator flashes. Be sure a cassette with record tab is loaded and the unit is in Stop mode.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a Timer Recording comes up during a normal recording or One Touch Recording (page 13), the Timer Recording will not be performed.
- If there is a power interruption of more than one minute, the recording may not be performed or continue.
- If "INCOMPLETE" appears after all items have been set, check all entries and make necessary corrections.

☒ **Check list before you begin.**


- ☐ All connections are made. (See page 7.)
- ☐ Your unit is plugged in.
- ☐ The clock is set to correct time.
- ☐ The tape is long enough.
- ☐ The record tab is in place.

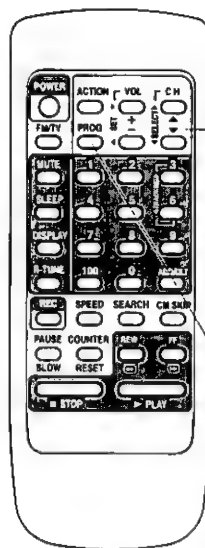

1. PROG
2. SELECT/SET
3. CH UP
4. CH DOWN
5. VOL UP
6. VOL DOWN

Timer Recording Using unit Buttons

You can set a Timer Recording using ACTION key on the unit. (See page 9.)

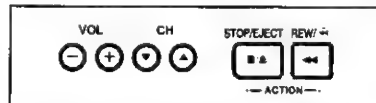

- 1 Press STOP/EJECT and REW together without a tape inserted to display MAIN MENU.
- 2 Press ▲▼ + - to select "VCR" and STOP/EJECT and REW together to display SET UP VCR screen.
- 3 Press ▲▼ to select "TIMER PROGRAM" and + to display the TIMER PROGRAM screen.
- 4 Repeat main steps 3~6.

Continued on the next page.

5

P	DT	START	STOP	CH	SPD
1	day	9:00p	12:00a	08	SP
2					
3					
4					

CANCEL: ADD/HLT KEY
 SELECT 1-8: ▲ ▼ KEY
 ENTER: ► KEY
 END: PROG/ACTION KEY


End the program.

Press PROG
(or ACTION.)

To Enter More Programs

Press ▲▼ and ► to select and set a blank program number, and then repeat steps 3 and 4.

6

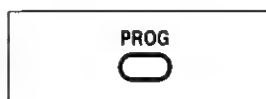**Exit this mode.**

Press PROG
(or ACTION) twice.

- If you're using a cable box, make sure that it is turned to the desired channel and the power is left on for timer recording.
- PROG TIMER indicator lights on the unit.

**Cancel a Timer
Recording:
(Recording is in progress)**

Hold down STOP for a few seconds to cancel the Timer Recording.

- Any future daily or weekly recordings will be performed as programmed.

Models PV-C1320/1330W/1340 unit is shown here.



PROG TIMER indicator

**Review, Replace or Clear Program
Contents : (Recording is not in progress)**


a

Repeat steps 1 and 2 on page 14.

b

P	DT	START	STOP	CH	SPD
1	day	9:00p	12:00a	08	SP
2	8	10:00a	12:00p	125	SP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	LP

CANCEL: ADD/HLT KEY
 SELECT 1-8: ▲ ▼ KEY
 ENTER: ► KEY
 END: PROG/ACTION KEY

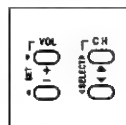
Select the desired program.

Press ▲▼ to
select.

C

To Replace program...

P	DT	START	STOP	CH	SPD
8	SAT	9:00P	12:00A	08	SP
7	DAY				
	CATEGORY: MOVIE			ABC	SP
	NOTES: STAND BY ME				
	SELECT START DATE				
	SELECT: ▲ ▼ KEY				
	SET: ◀ ▶ KEY				
	END: PROG/ACTION KEY				

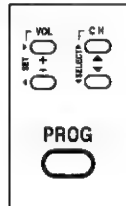

- 1) Press ► to display.
- 2) Press ▲▼ to select and ◀ or ► to set new program contents.
- 3) Press PROG (or ACTION.)

To Clear program...


P	DT	START	STOP	CH	SPD
1					
2	8	10:00p	12:00a	125	SP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	LP

SELECT 1-8: ▲ ▼ KEY
 ENTER: ► KEY
 END: PROG/ACTION KEY




Press ADD/HLT.

d

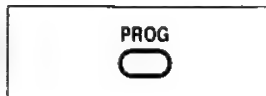**Exit this mode.**

Press PROG
(or ACTION) twice.

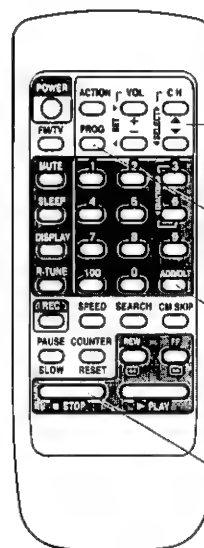


- b** SELECT/SET
c ▲: CH UP
 ▼: CH DOWN
 ►: VOL UP
 ◀: VOL DOWN
c PROG
d ADD/HLT
e STOP

TV Timer Features

ON-TIMER with Alarm

This unit can be set to automatically power on in one of 3 modes (TV, Playback, or FM Radio.) You can also combine the On-Timer with a one minute alarm that gradually increases in volume.


1

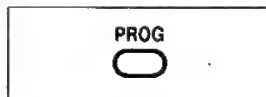


Display PROGRAM screen.

Press PROG.

2

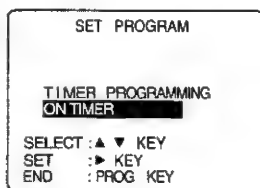


Select ON-TIMER.

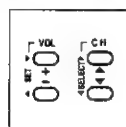


- 1) Press ▲▼ to select.
- 2) Press ► to display.

3

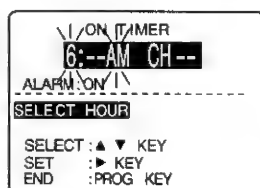


Set the ON-TIMER TIME.

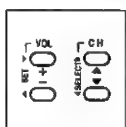


- 1) Press ▲▼ to select.
- 2) Press ► to set

- ON-TIMER mode selection order

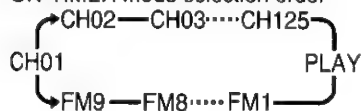


- Make sure a tape is inserted if Playback mode is selected.
- See "FM Radio" on pages 20 and 21 for instructions on how to preset FM stations.

4

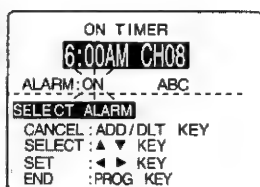

Set Alarm.

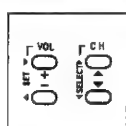


Press ▲▼ to select "ON" or "OFF."

When "ON" is selected, an alarm will gradually increase in volume for one minute or until canceled by pressing any button (including VOL + -.)

To Make Corrections, use ▲▼ and ◀▶ to move back and correct as necessary.

5

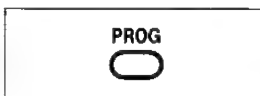

Set ON TIMER.

Press PROG.


- "ON TIMER SET" is displayed.
- ON TIMER indicator lights on the unit.




Check list before you begin.

- ☐ The clock is set to correct time.

Models PV-C1320/1330W/1340 unit is shown here.

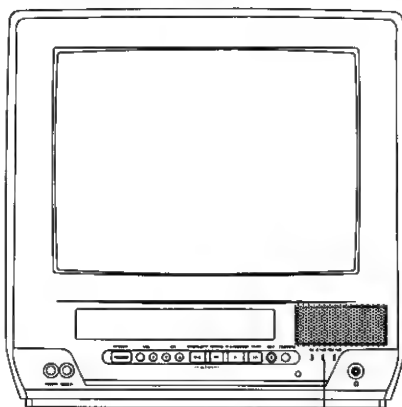

ON TIMER indicator

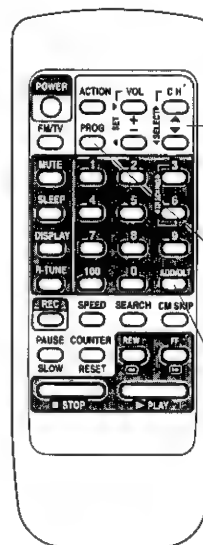

- 2 SELECT/SET
- 3 ▲ : CH UP
- 3 ▼ : CH DOWN
- 4 ► : VOL UP
- 4 ◀ : VOL DOWN
- 1 PROG
- 5

ADD/HLT

Note

If no button on the remote or unit (including a button used to turn off the alarm) is pressed within 60 minutes after unit turns itself on, it will turn itself back off.

To cancel ON-TIMER set,

Repeat steps 1 and 2. Then, press ADD/HLT to clear the time in step 3. Now, press PROG to end. "ON TIMER END" appears on-screen for a few seconds.

SLEEP TIMER


This unit can be set for auto power off.



Set SLEEP TIMER.


Press SLEEP repeatedly.

- Pressing DISPLAY with sleep timer set displays remaining time.

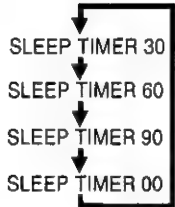

To cancel, press SLEEP repeatedly until "SLEEP TIMER 00" appears.


Models PV-C1320/1330W/1340 unit is shown here.

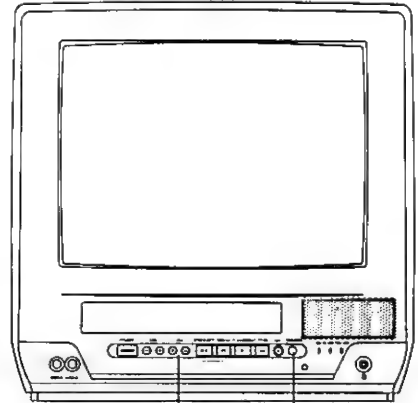

INSTANT ALARM

The feature allows you to set a timer alarm for up to 60 minutes. Useful for when you are cooking and need to leave the kitchen.

1

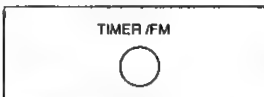

TIMER/FM button is shown.


Display INSTANT ALARM screen.

Press TIMER/FM or KITCHEN TIMER/FM (PV-C1350W) on the unit to display.


2 CH▲▼

1 TIMER/FM (or KITCHEN TIMER/FM for PV-C1350W)

2

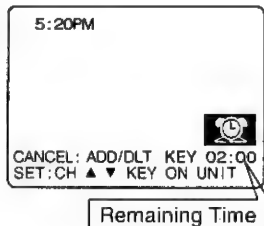


Set Alarm.

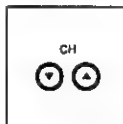

Press CH ▲▼ on the unit to select time while "CANCEL" and "SET" are displaying (see below.)

Press TIMER/FM or KITCHEN TIMER/FM (PV-C1350W) on the unit repeatedly to change display as follows.

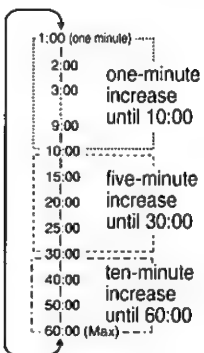


To cancel, press ADD/HLT while "CANCEL" and "SET" are displaying.

To increase timer in progress, Press CH ▲▼ on the unit to restart countdown rounded up to next 1, 5, or 10 minute interval while "CANCEL" and "SET" are displaying.

<Example>

- If current time remaining is 12:15, countdown will restart from 15:00.
- If current time remaining is 9:15, countdown will restart from 10:00.

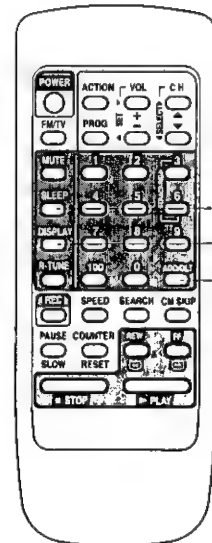

Note

You can be change channels with CH ▲▼ on the unit while "CANCEL" and "SET" are not displaying during timer progress.

3 Alarm will sound at 0:00. Press any button to stop.

- The volume of the alarm gradually increases for one minute and then continues to beep until any button is pressed.

Closed Caption System


Closed Caption Mode Feature

1 **ACTION**
○
Display MAIN MENU.
Press ACTION.

2 **MAIN MENU**
TV VCR LANGUAGE
CH CLOCK EXIT
SELECT: ▲▼ KEY
SET: ACTION KEY
Display SET UP TV screen.
1) Press ▲▼◀▶ to select "TV."
2) Press ACTION to display.

3 **SET UP TV**
LOCK
CAPTION
INPUT SELECT : TUNER
VIDEO ADJUST
SELECT: ▲▼ KEY
SET: ▶ KEY
END: ACTION KEY
Display CAPTION screen.
1) Press ▲▼ to select.
2) Press ▶ to display.

4 **CAPTION**
CAPTION MODE : OFF
CC ON MUTE : CAP C1
SELECT: ▲▼ KEY
SET: ▶ KEY
END: ACTION KEY
Select CAPTION MODE.
1) Press ▲▼ to select.
2) Press ▶ repeatedly to select caption mode.

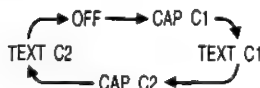

5 **ACTION**
○
Return to the normal screen.
Press ACTION three times.

Recording and Playing Back a Closed Caption/Text Program

Record:


Record normally. Closed Caption/Text signal, if present, is recorded automatically.

Playback:

Start playback. Do above steps to select desired caption mode.

Closed Caption is ...

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone.

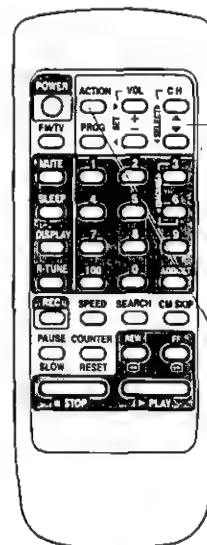

2 SELECT/SET
3 ▲: CH UP
▼: CH DOWN
4 ▶: VOL UP
◀: VOL DOWN
1 ACTION
2
5

Closed Caption Modes from which to Choose

Caption Mode: CAP C1 or C2

A narration of selected TV programs is displayed.

Check TV program listings for C. C. (Closed Caption) broadcasts.

Caption Mode: TEXT C1 or C2

The lower half of the screen will be blocked out. When the TV station broadcasts information, such as program listings, it will appear in this space.

Caption Mode: OFF

Closed Caption/Text narration will not be displayed.



NOTE:


The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings.


Caption On Mute Feature


Closed Caption narration, if available, is displayed when MUTE button is pressed for silence.


- 1**  **Display MAIN MENU.**
Press ACTION.

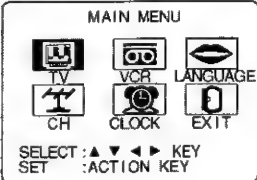- 2**  **Display SET UP TV screen.**
- 1) Press ▲▼◀▶ to select "TV."
 - 2) Press ACTION to display.
- 

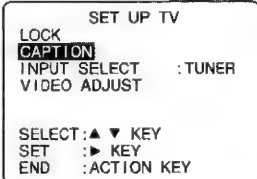- 3**  **Display CAPTION screen.**
- 1) Press ▲▼ to select.
 - 2) Press ▶ to display.

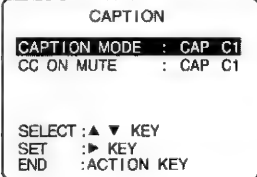- 4**  **Set CAPTION MODE OFF.**
- 1) Press ▲▼ to select.
 - 2) Press ▶ repeatedly to select "OFF."

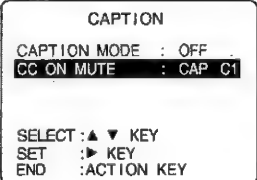- 5**  **Select CC ON MUTE.**
- 1) Press ▲▼ to select.
 - 2) Press ▶ repeatedly to select desired caption mode.

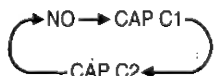


- Each press of ▶ will change the display as shown at left.
- The caption may be broadcast over CAP C1 or C2.

- 6**  **Return to the normal screen.**
Press ACTION three times.

- 7**  **Mute sound, display closed captioning.**
Press MUTE to mute the sound.

- To cancel, press MUTE again.

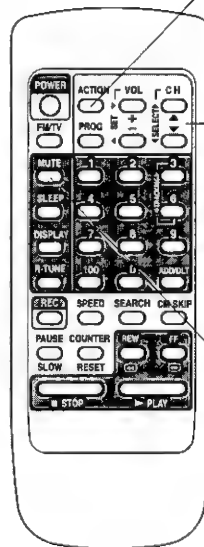

- 1 ACTION
2
6
2 SELECT/SET
3 ▲:CH UP
4 ▼:CH DOWN
5
7 MUTE

FM Radio Setup


1




Display FM radio mode.

Press FM/TV on the remote or TIMER/FM (KITCHEN TIMER/FM for PV-C1350W) twice on the unit.

2

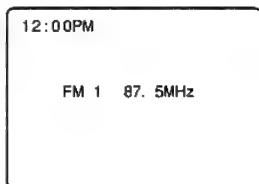


Select the FM number.

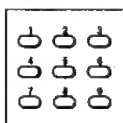

Press a NUMBERED key (1~9.)


3

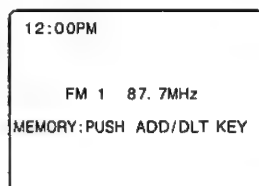

Set the radio station.



- 1) Press CH ▲▼ to select the desired radio station.
(Each press changes frequency 200 kHz.)
- 2) Press ADD/ DLT to set.

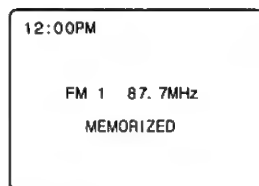

Quick Station Scan

Hold down CH ▲ or ▼ for a few seconds, then release to scan for FM stations in your area.

- To cancel, press CH ▲ or ▼ while in search mode.


To Make Corrections, select station with a NUMBERED key, then do step 3 again.

To exit FM mode, press FM/TV on the remote or TIMER/FM (KITCHEN TIMER/FM for PV-C1350W) twice on the unit.

FM ANTENNA Setup

Make sure FM tuning is done correctly
(See FM Radio Setup.)


a

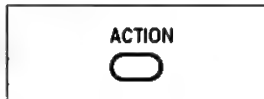

Display MAIN MENU.

Press ACTION.

b

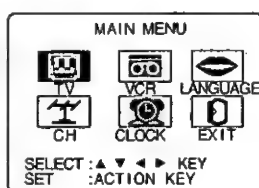

Display SET UP TV screen.




- 1) Press ▲▼◀▶ to select "TV."
- 2) Press ACTION to display.


FM Radio is ...

This unit has an FM radio with built-in antenna, 9 station preset, and a band range of 87.5 ~ 108.1 MHz. You can even set the On-Timer (page 16) to wake up to your favorite radio station.

Models PV-C1320/1330W/1340 unit is shown here.

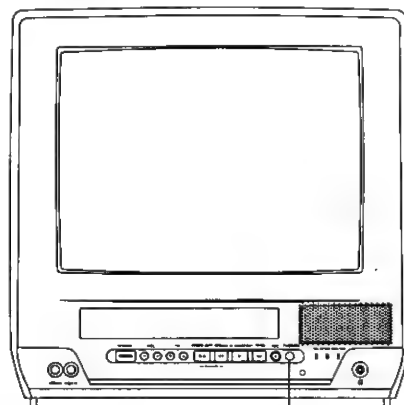


1 TIMER/FM
(or KITCHEN TIMER/FM for PV-C1350W)

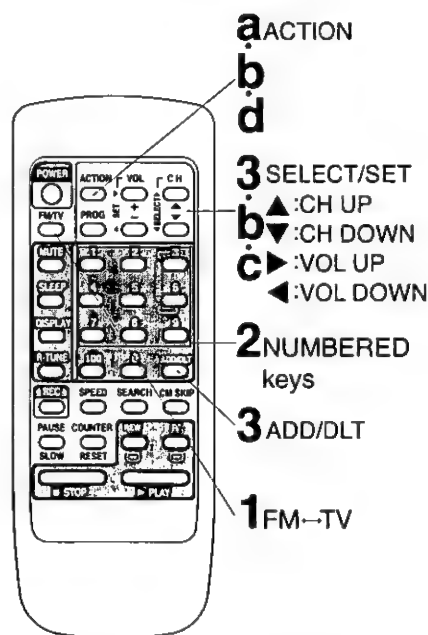


Continued on the next page...

C

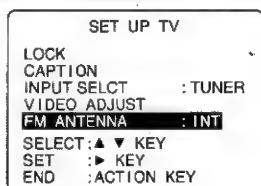


Select FM ANTENNA.

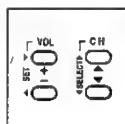

- 1) Press ▲▼ to select.
- 2) Press ► to select "INT (INTERNAL)" or "EXT (EXTERNAL)" whichever sounds the best.

- For cable TV users → "INT"
- For antenna users → "EXT"


d

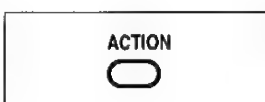

End setup.

Press ACTION twice to exit.

Models PV-C1320/1330W/1340 unit is shown here.

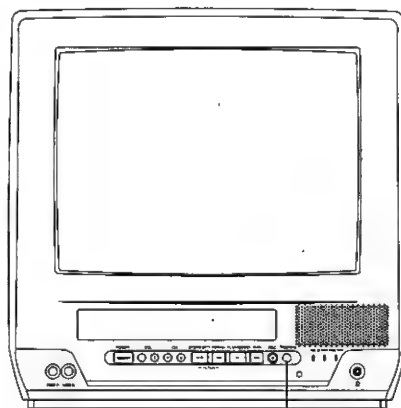

A TIMER/FM
(or KITCHEN TIMER/FM
for PV-C1350W)

Using FM Radio


A




Display FM radio mode.

Press FM/TV on the remote or TIMER/FM (KITCHEN TIMER/FM for PV-C1350W) twice on the unit.

B

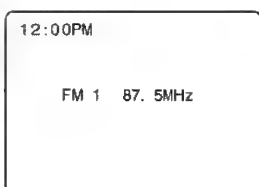


Select the FM number.

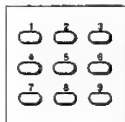

Press a NUMBERED key (1~9) to select a preset station (see steps 2 and 3 on the previous page.)

To cancel, press FM/TV on the remote or TIMER/FM (KITCHEN TIMER/FM for PV-C1350W) twice on the unit.

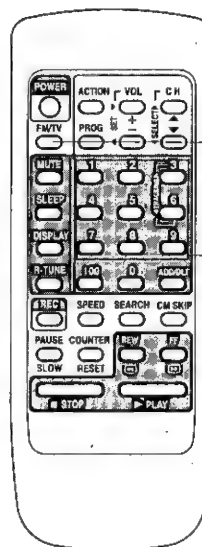

A FM-TV

B NUMBERED keys

Notes

Once stations are set, the selected station and current time are displayed when FM Radio mode is entered. To remove time, press DISPLAY. If DISPLAY is pressed, the unit status screen appears.

Notes

- FM radio cannot be recorded on a Video cassette.
- You may get better reception by repositioning the unit.
- You cannot select FM Radio mode during playback or record, or while a blue back screen (PROG, ACTION, MENU) is displayed.

Tape Operation

Commercial Skip


This unit fast forwards (skips) over 1~3 minutes of recorded tape during Play mode.

1



Set Skip Time.

Press CM Skip repeatedly to select skip time.

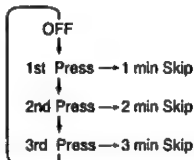

Program End Search

It is easy to detect the end of a recorded program so that you may continue or begin a new recording.


a




Display SELECT SEARCH MODE in Playback or Stop mode.

Press SEARCH on the remote.

b

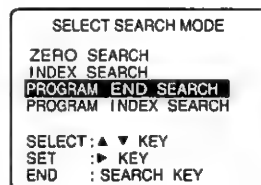

Display PROGRAM END SEARCH.

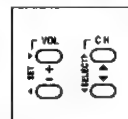

- 1) Press ▲▼ to select.
- 2) Press ► to start search.

Example of Program End Search operation.

Fig.1

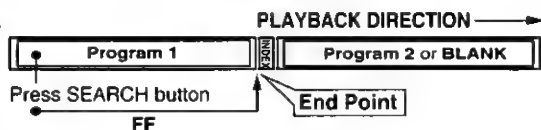


Fig.2


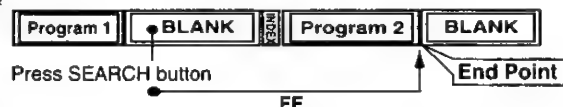


Fig.3


If search exceeds few seconds in BLANK area.

Press SEARCH button

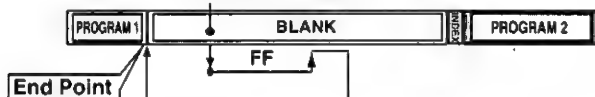

If Program End Point is found.


The search continues slightly beyond the end point, then search and reverse search and plays the last few seconds of the program and finally stop.

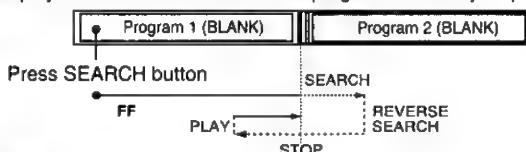

Notes

- If Program End Search is started very close to an index mark, one program may be skipped over.
- If you want to cancel Program End Search, Press PLAY or STOP.

Your unit is equipped with several time saving features as well as convenient automatic functions which make tape operation easier than ever.

 

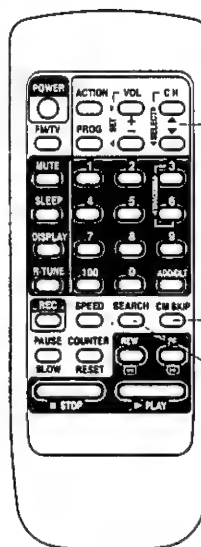



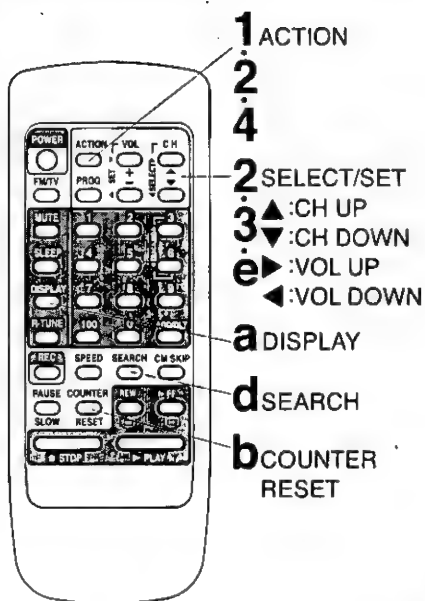
b SET
SELECT
▲:CH UP
▼:CH DOWN
►:VOL UP

1 CM SKIP
a SEARCH

Repeat Play

Set to see a recording over and over.

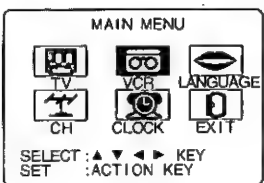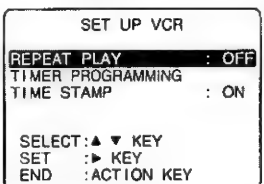- 1  **Display MAIN MENU.**
Press ACTION.
- 2  **Display SET UP VCR screen.**
1) Press ▲▼◀▶ to select "VCR."
2) Press ACTION to display.
- 3  **Select REPEAT PLAY.**
1) Press ▲▼ to select "REPEAT PLAY."
2) Press ▶ to set "ON" or "OFF."
- 4  **End setup.**
Press ACTION twice.




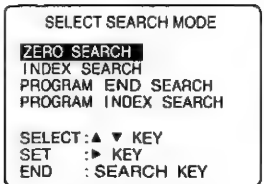


Notes

- Playback repeats when tape end is reached or unrecorded portion over 30 seconds is detected.
- During playback, you may also press PLAY/REPEAT repeatedly on the unit to select REPEAT "ON" or "OFF."

Zero Search

To quickly return to a specific tape counter location.

- a  **Display the Counter.**
Press DISPLAY during playback.
- b  **Reset to "0:00:00."**
Press COUNTER RESET at the desired position.
- c **Continue playback, rewind, or fast forward.**
- d  **Display SELECT SEARCH MODE in Stop mode.**
Press SEARCH.
- e  **Select ZERO SEARCH.**
1) Press ▲▼ to select.
2) Press ▶ to set.
- f **Return to "0:00:00."**
• Unit goes into FF or REW mode and stops at the last point the Counter was set to 0:00:00.

Auto Operation Functions


- **Auto Shut Off**
No broadcast signal in TV or Playback mode for 5 minutes
→ Power turns off automatically
• This feature is deactivated if any button is pressed during the above mode.
- **Auto Playback**
Insert a tape in Power off mode
→ Power turns on automatically
• Playback begins automatically if a tape has no record tab.
- **Auto Rewind**
A tape reaches its end
→ Rewind begins
→ Stops automatically
- **Playback Auto Eject (Repeat Play is "OFF")**
A tape has no record tab reaches its end
→ Rewind begins
→ Ejects automatically
- **Memory Rewind off**
Press POWER in REW mode
→ Power turn off of TV (continued rewind)
→ Rewind is completed
→ All power turns off automatically

Tape Operation (continued)

Direct Access (For Normal and/or Timer recordings)

Go directly to the desired recording.


1

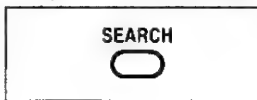


Display SELECT SEARCH MODE screen.
Press SEARCH in Playback or Stop mode.

- If there are no Timer Recordings on the Program Index List, go to step 3.

2

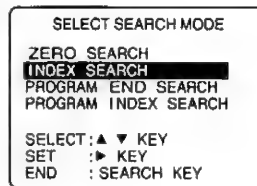


Display INDEX screen.

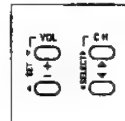


- 1) Press ▲▼ to select "INDEX SEARCH."
- 2) Press ► to display.

- This screen appears only if there are Timer Recordings.

3

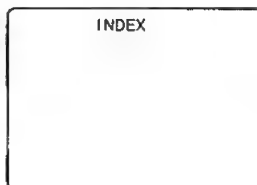


Select the recording number.

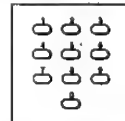


Press
NUMBERED
keys.

- To calculate number, see below.

4

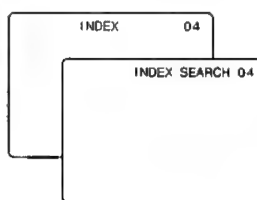

Start search.

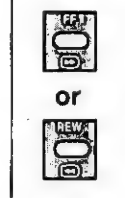


Press FF or REW.

- When search is finished, playback begins.

To calculate the Index Number


Example 1:

If you are watching recording 4 and you want to watch recording 2, enter 3 in step "3" and press REW.

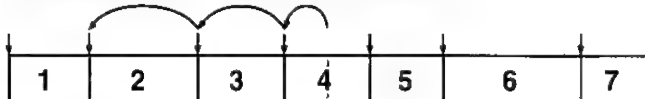

Example 2:

If you are watching recording 2 and you want to watch recording 6, enter 4 in step "3" and press FF.

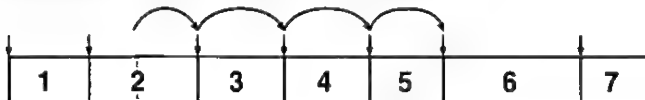


NOTE: ↓ indicates start points of each recording.


VHS Index Search System is ...

Each time recording is made, an invisible index mark is placed on the tape. When timer recordings are made, program index and information are also included. These index marks can be used to access or scan recordings.

Models PV-C1320/1330W/1340 unit is shown here.

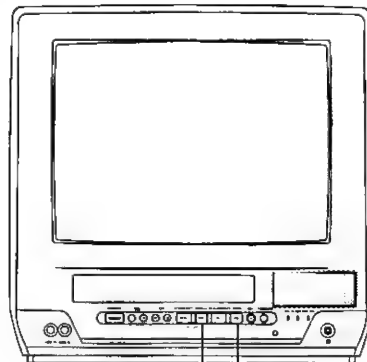

4 REW 4 FF

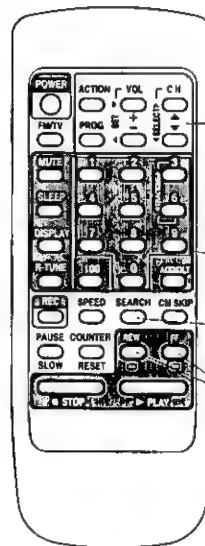

2 SELECT/SET
▲: CH UP
▼: CH DOWN
►: VOL UP

3 NUMBERED
Keys

1 SEARCH

4 FF or REW

Notes


- Make each entry within 10 seconds, or the Index Search mode will be canceled.
- If these VHS Index Search Systems are started very close to an index mark, that index mark may not be counted in the search.

Program Index Search (For Timer recordings only)


Choose a timer recorded program from a Program Index List.



Display SELECT SEARCH MODE screen.
Press SEARCH in Playback or Stop mode.

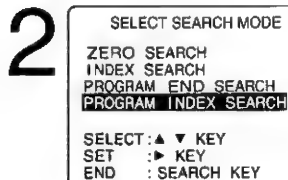


Display PROGRAM INDEX screen.

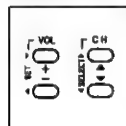

- 1) Press ▲▼ to select "PROGRAM INDEX SEARCH."
- 2) Press ► to display.



Select the desired recorded program.

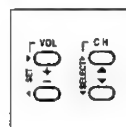

- 1) Press ▲▼ to select.
- 2) Press ► to start the forward or rewind search.

• When search is finished, playback begins.

Note

When the tape is ejected or normal recording is started, all program index data are deleted.

Index Forward Scan (for Normal and/or Timer recordings)


In Play mode, the first 10 seconds of each recording can be scanned (forward.)

- a**
- 1) Repeat steps 1 and press ▲▼ to select "INDEX SEARCH."
 - 2) Press ► to display INDEX screen.



Start the scan.

Press FF.

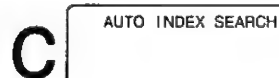


Cancel scan, start playback.

Press PLAY.


• To stop, press STOP.



Models PV-C1320/1330W/1340 unit is shown here.

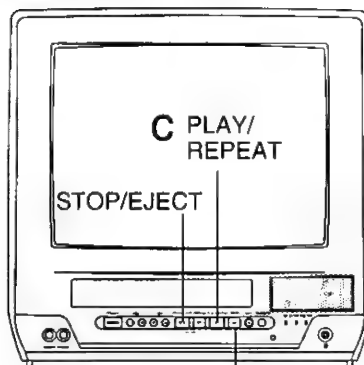


b FF

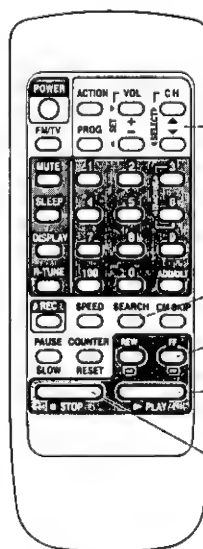

- 2 SELECT/SET
- 3 ▲ CH UP
- 3 ▼ CH DOWN
- a ► VOL UP

- 1 SEARCH
- b FF
- c PLAY
- STOP


<Example>

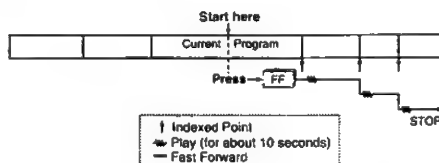

Special VCR Features


Preset Caption

1

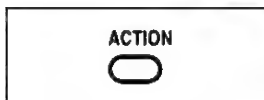

Display MAIN MENU.
Press ACTION.

2

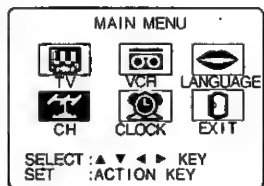


Display SET UP CH screen.




- 1) Press ▲▼◀▶ to select "CH."
- 2) Press ACTION to display.

3

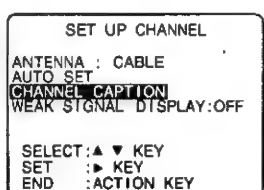


Select CHANNEL CAPTION.

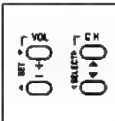


- 1) Press ▲▼ to select.
- 2) Press ► to display.

4

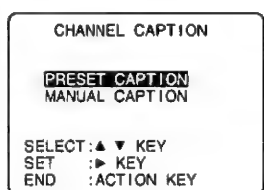


Select PRESET CAPTION.

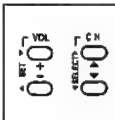


- 1) Press ▲▼ to select.
 - 2) Press ► to display.
- To create your own captions, go to "Manual Caption" on page 27.


5

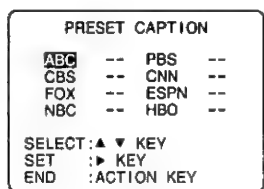

Go with preset captions.

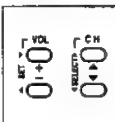

- 1) Press ▲▼ to select a station.
- 2) Press ► to move cursor to the right.
- 3) Press ▲▼ to select channel number.
- 4) Press ◀ to set.

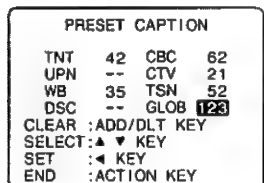


• Repeat step 5 until the Caption List is complete.

To Make Corrections

Press ▲▼, then ► to select channel number. Press ▲▼ to change, or ADD/HLT to delete.

6

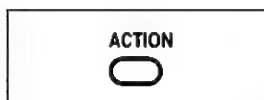

End setup.
Press ACTION four times.


Channel Caption is ...

Station names, e.g. ABC, TNT, etc. so that they will appear when a channel is selected. Choose 24 preset names (Preset Caption), or make up to 10 names of your own (Manual Caption.)



Check list before you begin.

☐ You need a list of stations and the channel numbers you receive them on.

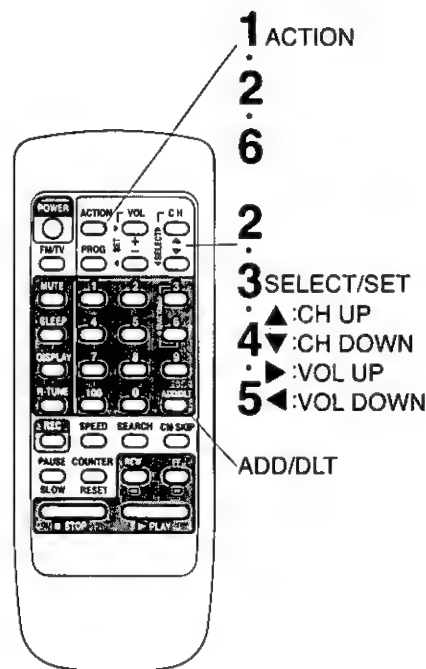


Manual Caption

1 Do "Preset Caption" steps 1~3 (page 26.)

2

CHANNEL CAPTION	
PRESET CAPTION	
MANUAL CAPTION	
SELECT:	▲ ▼ KEY
SET	: ► KEY
END	: ACTION KEY

Select MANUAL CAPTION.

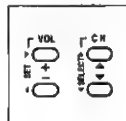


- 1) Press ▲▼ to select.
- 2) Press ► to display.

3

MANUAL CAPTION	
CH NUMBER	CAPTION
02	----
SELECT:	▲ ▼ KEY
SET	: ► KEY
END	: ACTION KEY

Select Channel number.

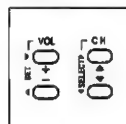


- 1) Press ▲▼ to select CH NUMBER.
- 2) Press ► to move cursor to the right.

- Channels already set and channels deleted from Channel Memory are not displayed.
- You can set a total of ten channel captions with up to four characters each.

4

MANUAL CAPTION	
CH NUMBER	CAPTION
02	A---
CLEAR	: ADD/HLT KEY
SELECT:	▲ ▼ KEY
SET	: ◀ ▶ KEY
END	: ACTION KEY

Enter your caption.

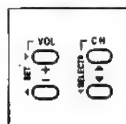

- 1) Press ▲▼ to select.
- 2) Press ► to enter..

- Characters change in the following order.

→ A—B—C—.....Z—BLANK— — —& ←
 → 9—.....2—1—0—/—! — ←

- Press ◀ repeatedly to move the cursor to "CH NUMBER." Repeat steps 3 and 4 as desired.

To Make Corrections


Press ▲▼, then ► to select channel number.
 Press ▲▼ to change, or ADD/HLT to delete.

5

ACTION
○

End setup.

Press ACTION four times.

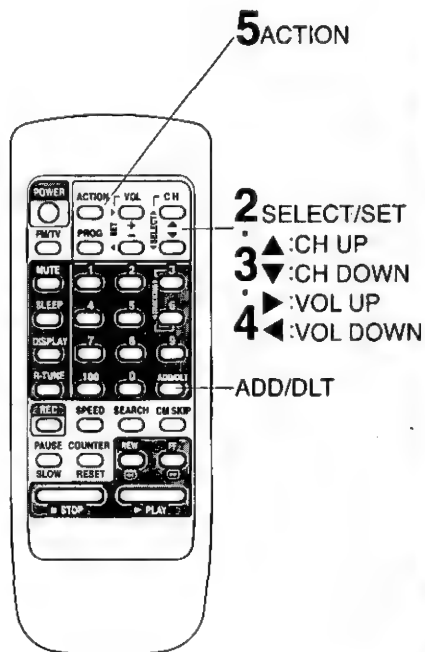

Special VCR Features (continued)

Time Stamp Feature

This unit writes program data (see example below) for about the first 10 seconds of every recording. The information is then displayed the first 10 seconds of playback. To change the data, see "Changing Time Stamp Data" section on next page.



- ☒ Check list before you begin.
- ☐ The clock is set to correct time.
- ☐ The record tab is in place.

1 **Display MAIN MENU.**
Press ACTION.



2 **Display SET UP VCR screen.**



1) Press ▲▼◀▶ to select "VCR."
2) Press ACTION to display.

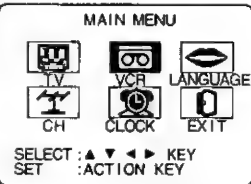
3 **Select TIME STAMP.**

1) Press ▲▼ to select.
2) Press ▶ to set "ON" or "OFF."

• When "OFF" is selected, the program data is written on the tape, but will not be displayed.

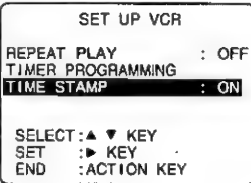



4 **Return to normal screen.**
Press ACTION twice.

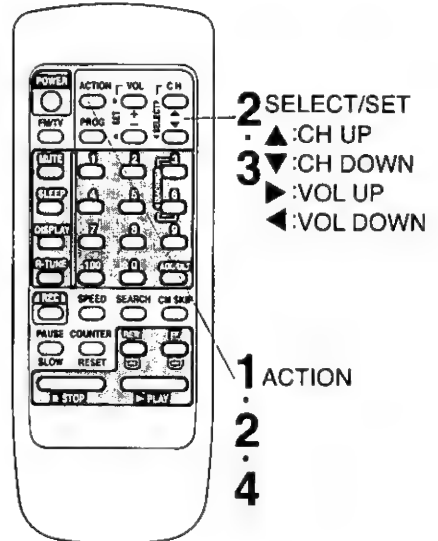



<Time Stamp Example >


Normal/ One
Touch Recording

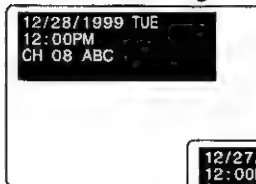

Timer
Recording

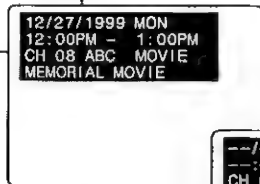

When Clock
is not set...

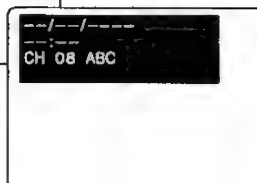

Changing Time Stamp Data

You may change the time stamp data (Date, Time, Channel, Category, and Notes) as desired.


1



Display Time Stamp Data.

- 1) Insert cassette with record tab.
- 2) Press PLAY.

2

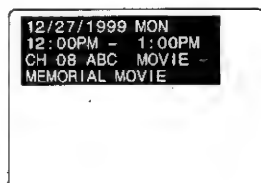


Display TIME STAMP EDIT.




Press PROG while the data is displayed in playback mode.

3

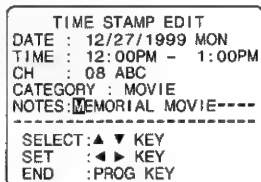


Change Time Stamp Data.

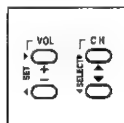

- 1) Press ▲▼ to select.
- 2) Press ► or ◀ to enter and continue.

• Characters in NOTES will change in the following order.

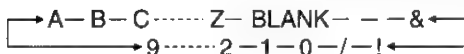


- 3) Repeat 1) and 2) as needed.

To Make Corrections

Press ◀► to move to the incorrect entry, then press ▲▼ to make the correction.

4

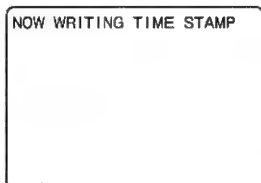


Write the new data.




Press PROG.

- After the data is written, the unit automatically goes into Stop mode.
- You cannot use POWER or REC button while "NOW WRITING TIME STAMP" is displayed.

Models PV-C1320/1330W/1340 unit is shown here.

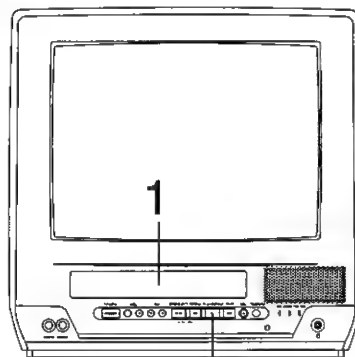

1 PLAY/REPEAT

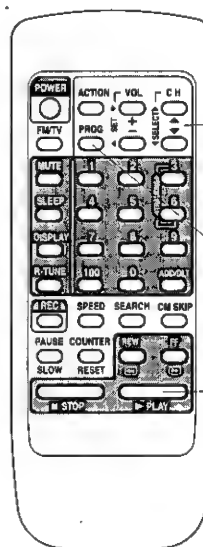

3 SELECT/SET

▲:CH UP

▼:CH DOWN

►:VOL UP

◀:VOL DOWN

2 PROG

4


1


PLAY


Special VCR Features (continued)


Weak Signal Display ON/OFF

When "ON" is selected, picture is displayed even when broadcast signal is weak or nonexistent.

1  **Display MAIN MENU.**
Press ACTION.

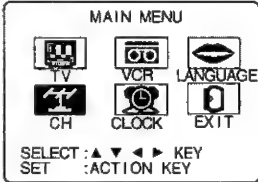2  **Display SET UP CH screen.**
1) Press ▲▼◀▶ to select "CH."
2) Press ACTION to display.

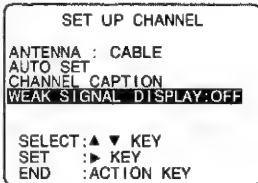3  **Select WEAK SIGNAL DISPLAY.**
1) Press ▲▼ to select.
2) Press ► to set "ON" or "OFF."

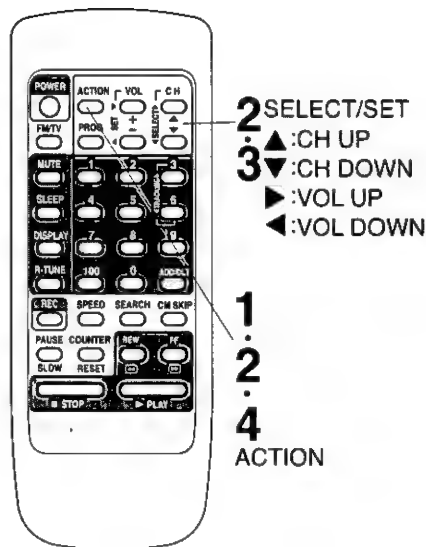

Notes

- "ON" = Picture is displayed regardless of signal condition, and may not always be clearly visible.
- "OFF" = Screen turns solid blue when signal is absent or weak.
- If unit is connected to equipment which has blue back feature, selecting "ON" will have no effect on the other equipment.

4  **Return to the normal screen.**
Press ACTION twice.


Models PV-C1320/1330W/1340 unit is shown here.

VCR Lock

All operations are prohibited except Timer recording and tape eject. Useful for families with small children.

VCR LOCK ACTIVATED

VCR LOCK OFF

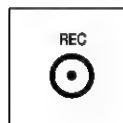


To turn "ON."

In stop mode, hold down REC on the unit without a cassette inserted for 7 seconds.

To turn "OFF."


Repeat above with or without cassette.

- VCR Lock is canceled automatically after about 24 hours if clock is set.

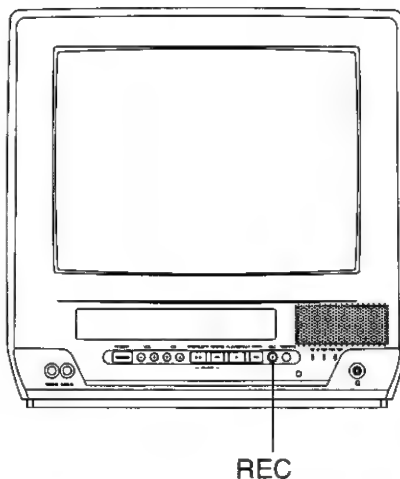

Copy Your Tapes (Dubbing)

Connections you'll need to make.

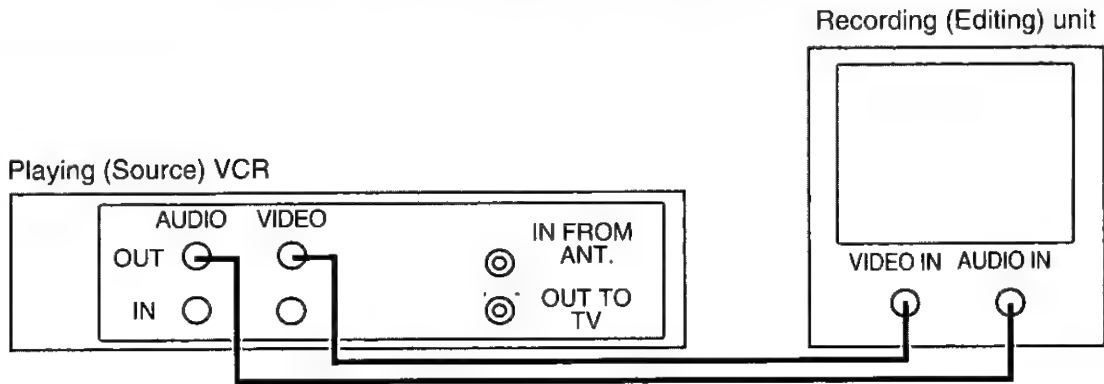




Playback (Source) VCR

Recording (Editing) unit



2 _____

Select "LINE" mode.
See "Selecting Input Mode" section on page 13.

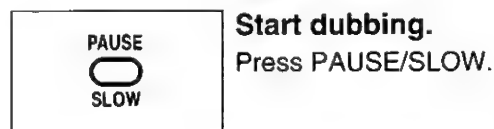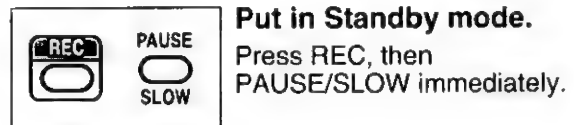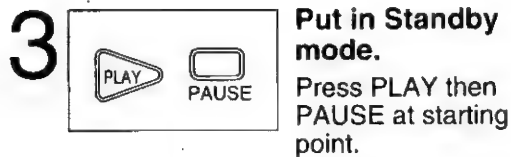

Caution

• Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

V-Chip Control Feature

V-Chip Feature is...

The unit has built-in V-Chip Control which allows you to block unwanted TV usage based on US MOVIES and US TV PROGRAMS ratings.

Process of V-Chip Feature

Enter Code → Setup → Blocking


Enter Secret Code

A 4-digit code must be entered to view a blocked program or change rating settings.




Display MAIN MENU.


Press ACTION.

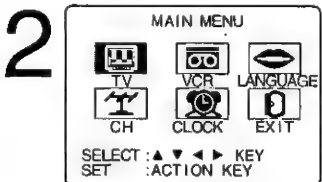


Display SET UP TV screen.

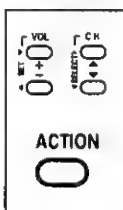


- 1) Press ▲▼◀▶ to select "TV."
- 2) Press ACTION to display.

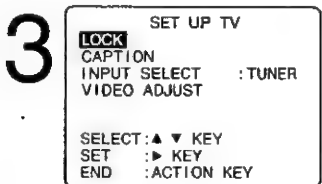


Select Lock.

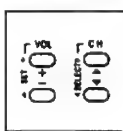

- 1) Press ▲▼ to select.
- 2) Press ▶ to display.

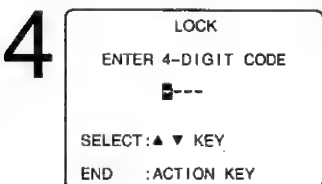

Enter your secret code.

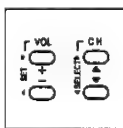


- 1) Press ▲▼ to select a number.
- 2) Press ▶ (or ◀) to set.

To Make Corrections


Press ◀▶ to move the cursor and ▲▼ to make the correction.

- Repeat step 4 until all 4-digits are entered.
- Take care that you are not observed entering the secret code.

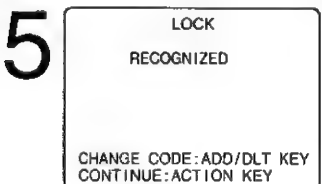


Save 4-DIGIT CODE.

Press ACTION.

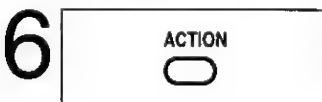

Display LOCK menu for rating screen.

Press ACTION and go to page 33 (US MOVIES Ratings), or page 34 (US TV PROGRAMS Ratings).
Or,
to exit, press ACTION four times.

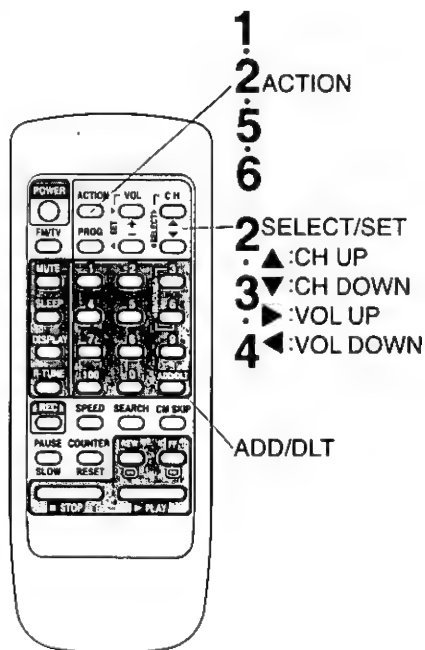

Changing your secret code

- You will need your current code.

Do steps 1~4. In step 5, press ADD/HLT to clear current code. Repeat steps 4 and 5 to enter new code.


Notes

- DO NOT forget your secret code.
- Once rating are set, restricted tapes or programs cannot be accessed unless the secret code is entered.


Setup US MOVIES Ratings

If LOCK menu is not displayed, do
"Enter Secret Code" steps on page 32.

1

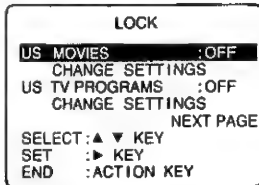

Select US MOVIES STATUS.

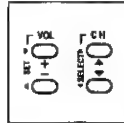

- 1) Press ▲▼ to select.
- 2) Press ► to set "ON" or "OFF."


If you select US MOVIES STATUS:

- "ON" → V-Chip Control is activated.
- "OFF" → V-Chip Control is deactivated.


Notes

- "NEXT PAGE" is setup to CANADIAN V-Chip setting mode.
- "NEXT PAGE" cannot be used in the U.S.

2

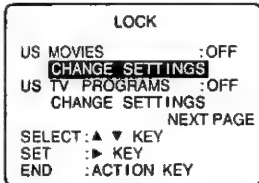


Select CHANGE SETTINGS.

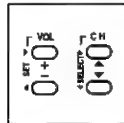


- 1) Press ▲▼ to select.
- 2) Press ► to display.

3

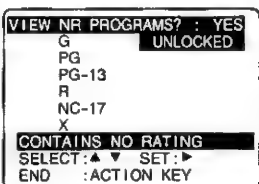

Select VIEW NR PROGRAMS?

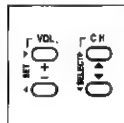


- 1) Press ▲▼ to select.
- 2) Press ► to set "YES" or "NO."


NR (Not Rated) PROGRAMS

Some movies, such as old movies or foreign movies usually have no ratings.

4

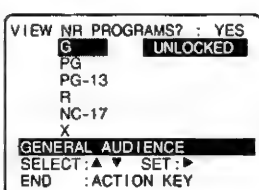

Select ratings to be blocked. (See right.)

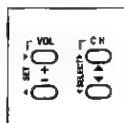

- 1) Press ▲▼ to select.
- 2) Press ► to set.

5




Redisplay LOCK menu to continue setup.

Press ACTION and go to page 34 (US TV PROGRAMS Ratings)

Or,
to exit, press ACTION four times.

Process of V-Chip Control Feature

Enter Code → Setup → Blocking

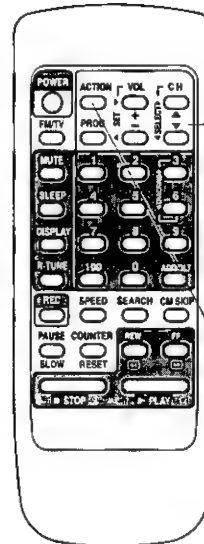

1. POWER
2. SELECT/SET
3. ▲: CH UP
4. ▼: CH DOWN
5. ACTION

US MOVIES RATINGS


G	GENERAL AUDIENCE: All ages admitted.
PG	PARENTAL GUIDANCE: Some material may not be suitable for children.
PG-13	PARENTS CAUTIONED: Some material may be inappropriate for children under 13.
R	RESTRICTED: Children under 17 must be accompanied by a parent or adult.
NC-17	OVER AGE 17 ONLY: No one 17 and under admitted.
X	ADULTS ONLY:

V-Chip Control Feature (continued)


Setup US TV PROGRAMS Ratings

If LOCK menu is not displayed, do
"Enter Secret Code" steps on page 32.

1

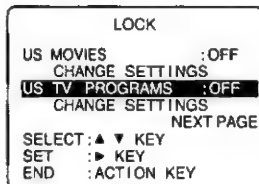

Select US TV PROGRAMS STATUS.

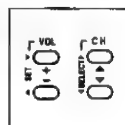

- 1) Press ▲▼ to select.
- 2) Press ► to set "ON" or "OFF."


If you select US TV PROGRAMS STATUS:

- "ON" → V-Chip Control is activated.
- "OFF" → V-Chip Control is deactivated.


Notes

- "NEXT PAGE" is setup to CANADIAN V-Chip setting mode.
- "NEXT PAGE" cannot be used in the U.S.

2

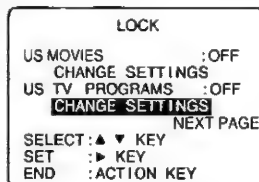


Select CHANGE SETTINGS.

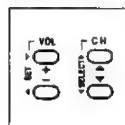


- 1) Press ▲▼ to select.
- 2) Press ► to display.

3

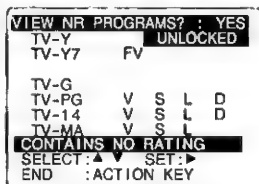

Select VIEW NR PROGRAMS?

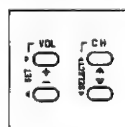


- 1) Press ▲▼ to select.
- 2) Press ► to set "YES" or "NO."


NR (Not Rated) PROGRAMS

Some TV shows, such as news, sports, weather, bulletins, emergency information usually have no ratings.

4

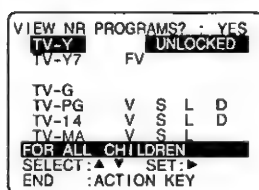

Select ratings to be blocked. (See next page.)

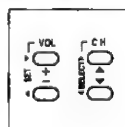


- 1) Repeatedly Press ▲▼ to select.
- 2) Press ► to set.

Note

You may select from standard TV ratings (chart 1), or customize to a specific content rating (chart 2.)

- Ratings which are highlighted in Green will be blocked, when not highlighted (white letters), these will not be blocked.

5

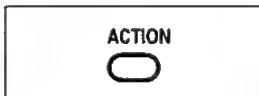


Exit this mode.

Press ACTION four times.

Process of V-Chip Control Feature

Enter Code → Setup → Blocking

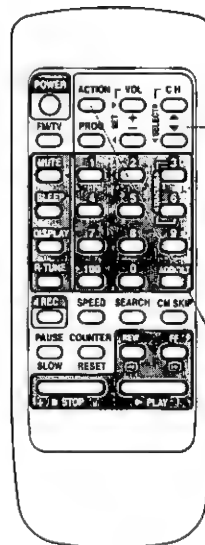

1

2 SELECT/SET

3 ▲:CH UP

4 ▼:CH DOWN

5 ACTION

US TV PROGRAMS GUIDE RATINGS: Chart 1

TV-Y	FOR ALL CHILDREN: Content specifically geared to young viewers ages 2-6.
TV-Y7	FOR AGE 7 AND OLDER: May contain mild physical or comedic violence which may frighten children under 7.
TV-G	GENERAL AUDIENCE: Contains little or no violence, strong language, or sexual dialogue or situations.
TV-PG	PARENTAL GUIDANCE: May contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
TV-14	PARENTS CAUTIONED: May contain sophisticated themes, sexual situations, strong language, and more intense violence.
TV-MA	MATURE AUDIENCE: May contain mature themes, profane language, graphic violence, and sexual situations.

US TV PROGRAMS GUIDE RATINGS: Chart 2

FV	Fantasy Violence
V	Violence
S	Sexual Situations
L	Adult Language
D	Sexually Suggestive Dialogue

Process of V-Chip Control Feature

Enter Code → Setup → Blocking

Blocking Message

<When V-Chip Control is activated>

ABC
PROGRAM RATING EXCEEDED
RATING: PG-13

- If V-Chip Control is activated, and a program or movie exceeds the ratings you have set, a message will appear on a black background and sound is muted.

STOP 11:00AM ABC
-0:12:34
SP
RATING: PG-13

- If DISPLAY is pressed, even when V-Chip control is deactivated, rating is displayed on-screen.


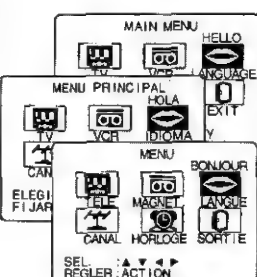
To Continue Viewing a Blocked Program

After entering your 4-digit secret code, go to step 1 on both pages 33 and 34 and select "OFF" to deactivate V-Chip Control.


- The US MOVIES and US TV PROGRAMS ratings you set will be retained.

Reset Language, Channels, Clock


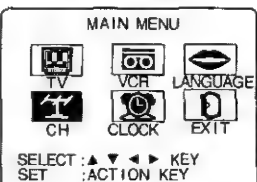
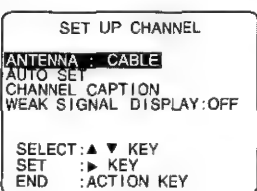
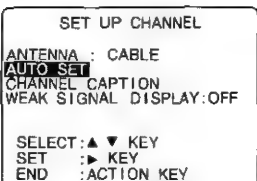
To Change the OSD Language


- 1  **Display MAIN MENU.**
Press ACTION.
- 2  **Select the language selection icon.**
 - 1) Press ▲▼◀▶ to select.
 - 2) Press ACTION repeatedly to set.

English:LANGUAGE
Spanish:IDIOMA
French:LANGUE

- 3  **End setup.**
 - 1) Press ▲▼◀▶ to select "EXIT."
 - 2) Press ACTION to exit.

To Replace Channels in Memory

- a  **Display MAIN MENU.**
Press ACTION.
- b  **Display SET UP CH screen.**
 - 1) Press ▲▼◀▶ to select "CH."
 - 2) Press ACTION to display.
- c  **Select ANTENNA.**
 - 1) Press ▲▼ to select.
 - 2) Press ▶ to select your antenna system ("TV" or "CABLE.")
- d  **Select AUTO SET.**
 - 1) Press ▲▼ to select.
 - 2) Press ▶ to start.

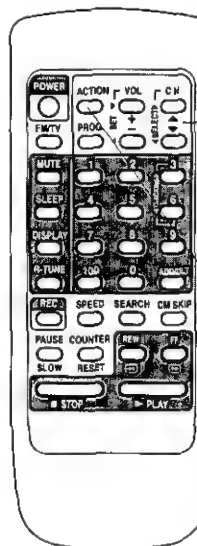



- 2 SELECT/SET
- 3 ▲:CH UP
- 4 ▼:CH DOWN
- 5 ▶:VOL UP
- 6 ◀:VOL DOWN
- 1 ACTION
- 2
- 3
- a
- b
- c
- d
- e

- e  **End setup.**
Press ACTION twice.


To Set or Reset the Clock

A  **Display MAIN MENU.**
Press ACTION.

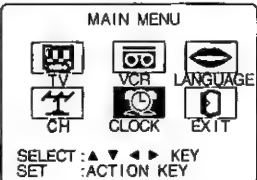B  **Display SET CLOCK screen.**
1) Press ▲▼◀▶ to select "CLOCK."
2) Press ACTION.

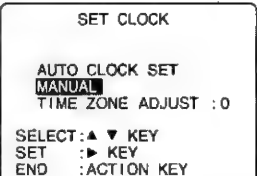
C  **Display SET CLOCK menu.**
1) Press ▲▼ to select "MANUAL."
2) Press ► to set.


- For Auto Clock Set, select "AUTO CLOCK SET" then press ► to set and CH ▲ to start.

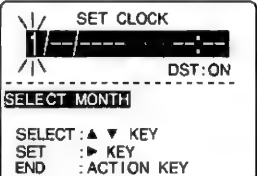D  **Set the clock manually.**
1) Press ▲▼ to select the month.
2) Press ► to set.

- Likewise set date, year, time, and DST. (Daylight Saving Time.)

To Make Corrections,
repeatedly press ◀▶ to move to error, then correct.


E  **End setup.**
Press ACTION twice to start the clock and exit this mode.

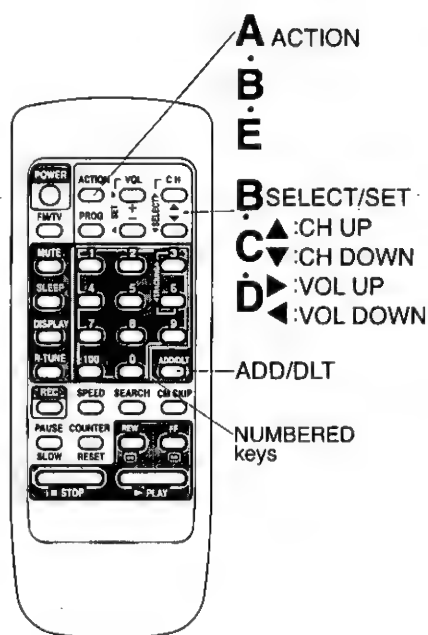

Add or Delete a Channel

To add channel:
Select channel with
NUMBERED keys
and press ADD/HLT.

To delete channel:
Select channel with
CH ▲▼ or
NUMBERED keys
and press ADD/HLT.

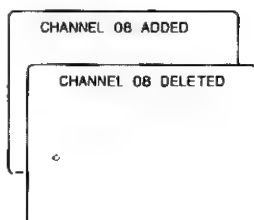


On-Screen Display (OSD)

VCR Status & Clock Display



To display or remove the overlay.

Press DISPLAY.

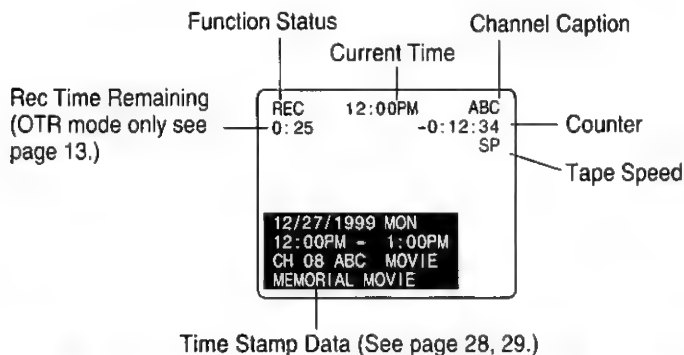


Blue Screen Display

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the "Weak Signal Display ON/OFF" (page 30) set to "OFF", the TV screen will turn solid blue.

Channel & Function Display

When a function button is pressed (PLAY, FF, etc.) or you change channels, the unit mode or channel number will be displayed. (Some station names may also appear if Channel Caption is set. See pages 26, 27.)

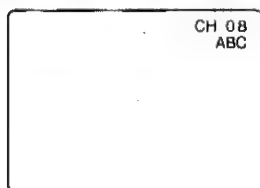

Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.

OSD	Caution	Page
NO CH FOUND PLEASE CHECK ANTENNA CABLE CONNECTION THEN PUSH CH UP KEY AGAIN	• If no active channels are found for CHANNEL MEMORY...	7
PLEASE SET CLOCK BEFORE PROGRAMMING	• If you attempt to set or review a Timer Recording, or set the On-Timer and the Clock is not set...	8, 9, 37
CHECK CASSETTE RECORD TAB	• If you press REC, and a cassette is inserted with no record tab...	6, 13
TO CANCEL TIMER REC HOLD DOWN STOP KEY FOR APPROX 3 SEC	• If you press STOP during a Timer Recording...	15
NO CASSETTE PLEASE INSERT A CASSETTE	• If you press PLAY, FF, REW, or REC without a cassette inserted...	12, 13
PLEASE PREPARE FOR TIMER REC	• If the unit is not in Stop mode or a cassette with record tab is not inserted two minutes before a Timer Recording is about to begin...	14, 15
VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL END: PLAY KEY	• If head cleaning becomes necessary while playing back a tape...	39
VCR LOCK ACTIVATED	• If you press a function button other than STOP/EJECT or POWER while the unit is in VCR Lock mode...	30


Unit Information

Reset all unit Memory Functions

Use when moving unit to a new location, or if a mistake was made in the One Time Setup section.

- Make sure a tape is not inserted in the unit.

Models PV-C1320/1330W/1340 unit is shown here.

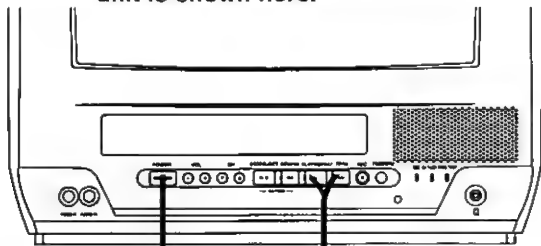


- 1 Turn the unit Power on.
- 2 Press and hold both PLAY and FF on the unit for more than 5 seconds.
 - The power will shut off.
- 3 Do "One Time Setup" Steps on page 8.

DST (Daylight Saving Time)

Unit auto adjusts clock for DST (Daylight Saving Time.)


Spring (First Sunday in April)

DST:ON → Sets clock ahead one hour.

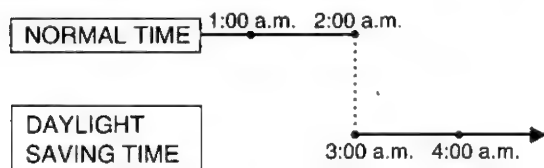

Autumn (Last Sunday in October)

DST:ON → Turns clock back one hour.

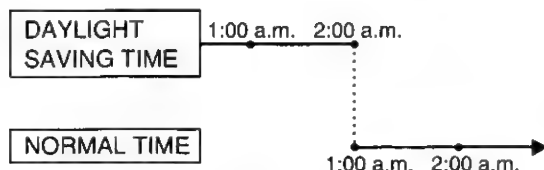

- If your area does not observe Daylight Saving Time, select DST:OFF.
- Keep these time changes in mind when programming the unit for timer recordings.

Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.

Head Clog Sensor

During playback this screen appears if clogging is detected. To remove screen, press PLAY on the remote or unit.

- Use "dry" type head cleaning cassette only.

(Part No. NV-TCL30PT is recommended.)

- Follow cleaning tape directions carefully.
- Excessive use of tape can shorten head life.

- If head clog symptoms persist, contact your nearest Factory Service Center or authorized Service Center. (See Page 44.)

VIDEO HEADS MAY
NEED CLEANING
PLEASE INSERT HEAD
CLEANING CASSETTE
OR REFER TO MANUAL

END:PLAY KEY

Specifications

Display

Picture Tube: 13 inch measured diagonal
90° deflection Picture Tube

VCR

Video Recording System: 2 rotary heads
(PV-C1320/PV-C1330W)
4 rotary heads
(PV-C1340/PV-C1350W)
helical scanning system
1 track

Audio Track:

Tuner

Broadcast Channels:

CABLE Channels:

VHF 2 ~ 13, UHF 14 ~ 69
Midband A through I (14 ~ 22)
Superband J through W (23 ~ 36)
Hyperband AA ~ EEE (37 ~ 64)
Lowband A-5 ~ A-1 (95 ~ 99)
Special CABLE channel 5A (01)
Ultraband 65 ~ 94, 100 ~ 125

FM Radio

Band range:

87.5 ~ 108.1 MHz

General

Power Source:

120 V AC, 60 Hz

Power Consumption:

Power On
Approx. 69 watts
Power Off
Approx. 4.5 watts

Television System:

EIA Standard NTSC color

Speaker:

1 piece

Operating Temperature:

5 °C ~ 40 °C (41 °F ~ 104 °F)

Operating Humidity:

10 % ~ 75 %

Weight:

12 Kg (26.4 lbs.)

Dimensions:

15-3/16" (W) X 15-3/16" (H) X
14-3/4" (D)

386 (W) X 385 (H) X 374 (D) mm


Note: Designs and specifications are subject to change without notice.

Conexión de la antena externa

Desenganche la antena del televisor o de la videograbadora que tuviera anteriormente y conéctela a la parte trasera del registrador Combinación de VCR/TV, como se muestra en el diagrama. Si el sistema de su antena tiene conductores UHF y VHF separados, usted necesita un mezclador de banda UHF/VHF (no viene con el equipo.)

ADVERTENCIA:

Al utilizar cables coaxiales RF del "Tipo tuerca", solo debe apretarse con los dedos. Si se aprieta demasiado los cables pueden resultar dañados.

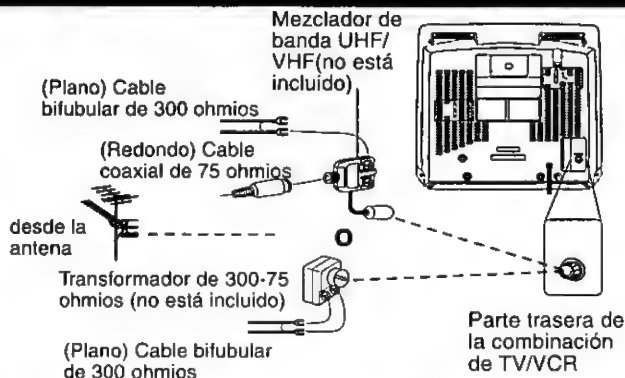

Conexiones de TV cable


■ Sin un decodificador de TV cable

Podrá;

- grabar o ver canales sin codificar.

No Podrá;

- grabar o ver canales codificados.
- ver otro canal que no sea el seleccionado para cualquier tipo de grabación.

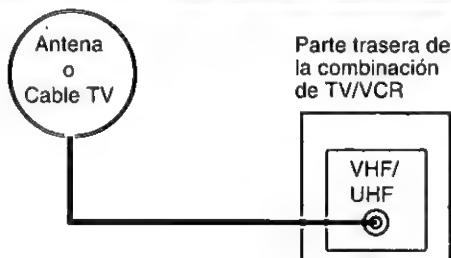

■ Con un decodificador de TV cable


Podrá;

- grabar o ver cualquier canal incluso los canales codificados.

NOTA : El canal deberá ser seleccionado en el decodificador de TV cable.

No Podrá;

- ver otro canal que no sea el seleccionado para cualquier tipo de grabación.
- hacer una grabación con temporizador de un canal a menos que lo seleccione en el decodificador de TV cable.

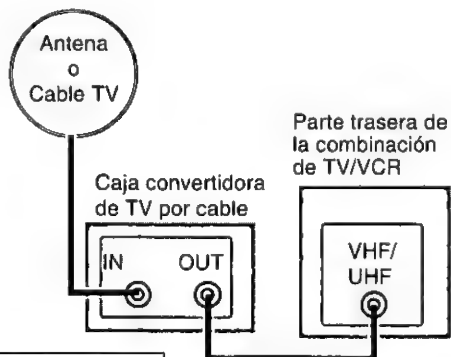

Para ver y grabar un canal codificado/ no codificado

Sintonice el canal del Registrador de la combinación de TV/VCR en el canal de salida de la caja convertidora de televisión por cable (por ejemplo el canal 3.) Después, seleccione en el decodificador de TV cable el canal que se quiera ver o grabar.

■ Con un receptor DSS

Podrá;


- grabar o ver cualquier canal incluso los canales codificados.

NOTA : El canal deberá ser seleccionado en el receptor DSS.

No Podrá;

- ver otro canal que no sea el seleccionado para cualquier tipo de grabación.
- hacer una grabación con temporizador de un canal a menos que lo seleccione en el receptor DSS.

NOTA : El receptor DSS debe estar apagado para ver programas desde un decodificador de TV cable o desde la antena. Consulte el manual del receptor DSS para más detalles.

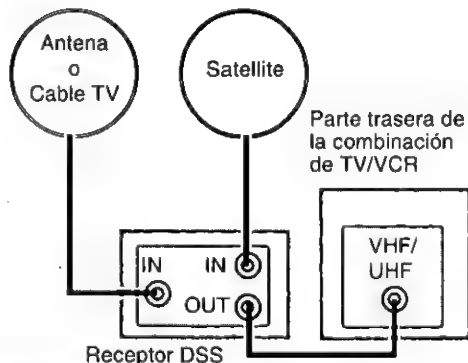

Para fijar el idioma, canal y reloj

1 Presione **POWER** para encender el videograbador combinado.

2 **SELECT LANGUAGE**
 PUSH CH ▲ : English
 OPRIMIR CH ▼ : Español
 APP. VOL + : Français

Seleccione el lenguaje.
 CH ▲ : para inglés
 CH ▼ : para español
 VOL+ : para francés

3 **FIJACION AUTO. (CA/RELOJ)**
 CONECTE EL CABLE DE LA ANTENA Y SI ESTA USANDO UNA CAJA DE TV POR CABLE SINTONICE AL CANAL PBS DE SU LOCAL LUEGO...
 POR FAVOR OPRIMIR CH UP

Comience el ajuste automático de canales y el ajuste automático del reloj.
 Presione CH ▲.

Las siguientes informaciones aparecerán seguidamente:

- AUTOPROGRAMACION EN PROCESO
- AUTOPROGRAMACION COMPLETO
- FIJACION AUTOMATICA DEL RELOJ EN PROCESO

Caso 1

7/28/1999 MIE 12:00PM
 HORA VERANIEGA: ACT
 CANAL FIJADO : CA 10
 FIJACION AUTOMATICA
 COMPLETO
 TERMINAR : OPRIMIR CH UP

(Ajuste terminado)

Presione CH ▲ para salir.

- Si la hora exhibida no es la correcta para su zona, ajuste el reloj nuevamente de acuerdo con la sección "Ajuste de la zona horaria" en la siguiente página.

Caso 2

FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO
 OPRIMIR ACTION PARA FIJAR EL RELOJ

(Ajuste sin terminar)

NOTA IMPORTANTE PARA AJUSTE AUTOMATICO DEL RELOJ

- El ajuste automático del reloj será realizado al volver a encender el videograbador combinado cada vez que lo apague. Si usa un decodificador de TV cable y desea que la función de ajuste automático del reloj funcione, el decodificador de TV cable debe quedar encendido y sintonizando el canal PBS en el momento en que se apaga el videograbador combinado.
- Si usa un sintonizador de TV satelital, para que funcione el ajuste automático del reloj, debe de estar apagado.
- Si usa un toma de audio/video para conectar el videograbador combinado y el decodificador de TV cable o el sintonizador de TV satelital, deberá también conectar el cable coaxial RF para poder usar las funciones de ajuste automático de reloj y ajuste automático de canal.
- Si por cualquier razón se cambiara la hora manualmente, no se podrá realizar la corrección automática de la hora.

Caso 1 Ajuste de la zona horaria.

A Exhiba el **MENU PRINCIPAL**.
 Presione ACTION.

B **MENU PRINCIPAL**
 TV VCR DIOMA
 CANAL RELOJ SALIR
 ELEGIR: ▲ ▼ ◀ ▶
 FIJAR : ACTION

Exhiba la pantalla "FIJAR RELOJ."

- 1) Presione ▲▼◀▶ para seleccionar "RELOJ."
- 2) Presione ACTION para exhibirla.

C **FIJAR RELOJ**
 FIJACION AUTOMATICA MANUAL
 AJUSTE ZONA HORA : 0
 ELEGIR: ▲ ▼
 FIJAR : ◀ ▶
 TERMINAR: ACTION

Seleccione "AJUSTE ZONA HORA."

- 1) Presione ▲▼ para seleccionar.
- 2) Presione ◀▶ para ajustar.

D Final del ajuste.

Presione ACTION dos veces.

- El valor numérico ajustado aquí se vuelve "0" una vez que ajuste manualmente el reloj.

Caso 2

El ajuste del reloj es incompleto.
 Ajuste el reloj manualmente.

a **FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO**
 OPRIMIR ACTION PARA FIJAR EL RELOJ

Exhiba la pantalla **FIJAR RELOJ**.

Presione ACTION para salir de este modo.

b **FIJAR RELOJ**
 VERANO: ACT
 ELEGIR MES
 ELEGIR: ▲ ▼
 FIJAR : ▶
 TERMINAR: ACTION

Ajuste el reloj manualmente.

- 1) Presione ▲▼ para seleccionar el mes.
- 2) Presione ▶ para ajustar.

- De la misma manera, ajuste el día, el año, la hora y la hora de ahorro de energía. (VERANO)

Para hacer correcciones.

presione repetidamente ◀▶ para moverse hasta el error, luego corrija.

C Final del ajuste.

Presione dos veces ACTION.

Para fijar o fijar de nuevo el reloj

En caso de que el reloj es incorrecto o ha ocurrido un corte eléctrico.

- 1 Oprima ACTION para que parezca el MENU PRINCIPAL.
- 2 Oprima ▲▼◀▶ para elegir "RELOJ." Luego, oprima ACTION para que aparezca la pantalla de la FIJAR RELOJ.
- 3 Oprima ▲▼ para elegir "MANUAL," y luego ▶ para que aparezca la pantalla de la FIJAR RELOJ.
- 4 Por favor continúe con los pasos b y c de la instrucción anterior (Caso 2.)

Operaciones básicas para la reproducción

- 1 **Inserte un casete.**
 - El videograbador combinado se enciende automáticamente.
- 2 **Presione PLAY.**
 - La reproducción comienza automáticamente si el casete no tiene la lengüeta para prevención de grabación.
 - Para encontrar una escena en particular
 - Búsqueda hacia adelante → Presione FF
 - Búsqueda hacia atrás → Presione REW
 - Para ver en cámara lenta → Mantenga pulsado el botón PAUSE/SLOW en el modo fija
 - Para ver una imagen fija (congelada) → Presione PAUSE/SLOW
 - Para ver imágenes cuadro a cuadro → Presione PAUSE/SLOW en el modo de imagen fija
 - Para parar → Presione STOP
 - Para rebobinar la cinta → Presione REW
 - Para hacer avanzar la cinta rápidamente → Presione FF
 - Para expulsar la cinta → Presione STOP/EJECT en el videograbador combinado

Operaciones básicas para la grabación

- 1 **Inserte un casete con la lengüeta para prevención de grabado.**
 - El videograbador combinado se enciende automáticamente.
- 2 **Seleccione el canal.**

Presione CH ▲▼ o las teclas numéricas correspondiente.
- 3 **Seleccione la velocidad de grabación.**

Presione SPEED.


SP = reproducción normal
LP = reproducción larga
SLP = reproducción super larga

 - La velocidad seleccionada debe aparecer en la pantalla.
- 4 **Comience la grabación.**

Presione REC.

 - Para editar partes no deseadas de una grabación, presione PAUSE para hacer una pausa durante la grabación.
 - No podrá ver otro canal durante la grabación.
 - Para parar → Presione STOP.
 - El videograbador combinado deja de grabar a una hora prefijada. (Grabación de un toque)

Presione REC repetidamente para ajustar la hora de grabación (30 min - 4 horas.)

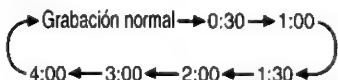

Grabación con temporizador

- 1 **Exhiba FIJAR PROGRAMACION.**

Presione PROG.
- 2 **Exhiba TEMPORIZADOR.**

1) Presione ▲▼ para seleccionar.

2) Presione ► para exhibir.

 - Si ya existe un programa en la memoria, presione ▲▼ y ► para seleccionar un número de programa sin usar.
- 3 **Ajuste la fecha de grabación.**

1) Presione ▲▼ para seleccionar.

2) Presione ► o ◀ para ajustar.

• 1 - 31 = Grabación única

• DIARIO = a la misma hora de lunes a viernes

• SEMANAL = a la misma hora una vez a la semana

Fecha de hoy — 7 — 8 — 9 — 31 — 1 — 2 — 6 —

▲ / ▼ Orden para elegir

SEMANTAL (SAB) — SEMANTAL (LUN) — SEMANTAL (DOM)

Repita el paso 3 para ajustar: hora de comienzo, hora de parada, canal (o LINEA para una fuente exterior), categoría [N/O (no aplicable), DEPORTE, CINE, COMEDIA, MUSICA, DRAMA], velocidad (SP, LP, SLP)
- 4 **Haga las anotaciones necesarias.**

• Si no fueran necesarias, vaya al paso 5.

1) Presione ▲ para hacerlas.

2) Presione ▲▼ para seleccionar.

 - Los caracteres cambiarán en el siguiente orden.

3) Presione ► o ◀ para ajustar.

4) Presione PROG para finalizar.
- 5 **Termine el programa.**




Presione PROG (o ACTION.)

Para introducir más programas.

presione ▲▼ y ► para seleccionar y ajustar el número de programa en blanco, y luego repita los pasos 3 y 4.
- 6 **Salga de este modo.**

Presione PROG dos veces (o ACTION.)

 - Si está usando un decodificador de TV cable, asegúrese que se encuentra en el canal deseado y que la alimentación queda conectada para grabar con temporizador.
 - El indicador PROG TIMER se enciende en el videograbador combinado.

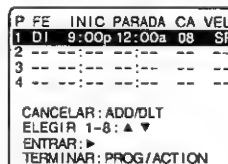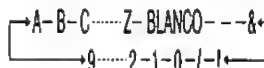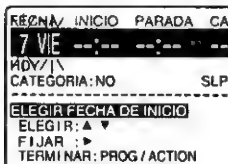

Before Requesting Service

Check the following points once again if you are having trouble with your unit.

Power	Correction
No power...	<ul style="list-style-type: none"> • Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Monitor	Correction
No picture or sound...	<ul style="list-style-type: none"> • Make sure your antenna system (TV or CABLE), is correctly set. (P. 7) • Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Poor picture with normal sound...	<ul style="list-style-type: none"> • Adjust BRIGHTNESS, SHARPNESS, and PICTURE controls in the SET UP TV menu. (P. 11)
Poor sound with normal picture...	<ul style="list-style-type: none"> • Adjust VOLUME control. (P. 10)
Poor TV reception...	<ul style="list-style-type: none"> • Adjust SHARPNESS and PICTURE controls in the SET UP TV menu. (P. 11)
No color or poor color...	<ul style="list-style-type: none"> • Adjust TINT and COLOR controls in the SET UP TV menu. (P. 11)
Ghost (multiple) images...	<ul style="list-style-type: none"> • Install a directional antenna.
TV programs cannot be watched...	<ul style="list-style-type: none"> • Make sure the selected channel is in unit's memory. (P. 36)
Channel cannot be selected...	<ul style="list-style-type: none"> • Only the channel begin recorded can be viewed on this unit.
VCR	Correction
TV program cannot be recorded...	<ul style="list-style-type: none"> • Make sure your antenna system (TV or CABLE), is correctly set. (P. 7) • Make sure cassette record tab is intact. (P. 6)
Timer recording cannot be performed...	<ul style="list-style-type: none"> • Check that clock is set to current time and date. • Make sure DSS/CABLE box (if used) is left on and tuned to channel to be recorded. • Set recording Start/Stop time correctly. (P. 14, 15) • Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during a Timer recording even after power is restored.
No playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> • Adjust TRACKING control in either direction. (P. 12) • Try Head Cleaning. (P. 39)
VCR cannot be controlled...	<ul style="list-style-type: none"> • Make sure VCR LOCK is set to off. (P. 30) • Make sure unit is not in a Timer Record operation.
Remote Control	Correction
Unit cannot be controlled...	<ul style="list-style-type: none"> • Aim remote at remote sensor on unit (P. 47) so that signal is unobstructed. • Inspect the remote batteries. (P. 6) • Make sure VCR LOCK is set to off. (P. 30) • Exposing unit remote sensor to direct fluorescent or outdoor light may cause signal interference.
Miscellaneous	Correction
Video cassette cannot be inserted...	<ul style="list-style-type: none"> • Insert the cassette window side up; record tab facing you.
Video cassette cannot be removed...	<ul style="list-style-type: none"> • Completely insert Power Plug into an AC outlet.
Tape cannot be ejected or inserted...	<ul style="list-style-type: none"> • Try ejecting or inserting the tape again after turning POWER off, then back on.
Video cassette ejects when a recording is started, or the power is turned off for timer recording...	<ul style="list-style-type: none"> • Make sure cassette record tab is intact. (P. 6)
In Stop mode, the VCR motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> • To enable Quick Play mechanism, the VCR cylinder will rotate for about 5 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.
VCR cannot be controlled...	<ul style="list-style-type: none"> • Make sure VCR LOCK is set to off. (P. 30)

If you cannot resolve the problem, please call the Customer Satisfaction Center for product assistance at 201-348-9090.

To locate an authorized servicenter call toll free 1-800-211-PANA(7262.)

Service Center List

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm Saturday-Sunday 9 am-7 pm, EST.

Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your nearest servicer by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Factory Servicenters Locations

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630

800 Dubuque Avenue
S. San Francisco,
CA 94080

20201 Sherman Way
Suite 102
Canoga Park, CA 91306

3878 Ruffin Road
Suite A
San Diego, CA 92123

COLORADO

1640 South Abilene
Street Suite D
Aurora, CO 80012

FLORIDA

3700 North 29th Avenue
Suite 102
Hollywood, FL 33020

GEORGIA

8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS

9060 Golf Road
Niles, IL 60714

1703 North Randall
Road Elgin, IL 60123
(Pick-up / Drop-off only)

MARYLAND

62 Mountain Road
Glen Burnie, MD 21061

MASSACHUSETTS

60 Glacier Drive
Suite G
Westwood, MA 02090

MICHIGAN

37048 Van Dyke
Avenue
Sterling Heights,
MI 48312

MINNESOTA

7850-12th Avenue South
Airport Business Center
Bloomington, MN 55425

OHIO

2236 Waycross Road
Civic Center Plaza
Forest Park, OH 45240

PENNSYLVANIA

2221 Cabot Blvd
West Suite B
Langhorne, PA 19047

Chartiers Valley
Shopping Center
1025 Washington Pike
Bridgeville, PA 15017

TENNESSEE

3800 Ezell Road
Suite 806
Nashville, TN 37211

TEXAS

7482 Harwin Drive
Houston, TX 77036

13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON

20425-84th Avenue
South Kent, WA 98032

HAWAII

99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone (808) 488-1996
Fax (808) 486-4369

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicer:
Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787)750-4300 Fax (787)768-2910

As of October '99

Warranty

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America,
One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infantería, Km. 9.5 San Gabriel
Industrial Park Carolina, Puerto Rico 00985

PANASONIC Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS
VCR	ONE (1) YEAR	NINETY (90) DAYS
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS
MONITOR-VCR	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS CUSTOMER PAYS ALL LABOR CHARGES AFTER 90 DAYS

Monitor-VCR In-home or carry-in Service: 22" (diagonal) CRT / LCD and Larger Monitor-VCR Carry-in Service: 21" (diagonal) CRT / LCD and smaller

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days. In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free 1-800-211-PANA (7262), to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 10/20/99

Location of Controls

Remote Control Buttons

VOLUME UP/DOWN Page 10.
SET/BACKSPACE Page 9.

ACTION
 Page 36.

POWER
 Page 8.

FM/TV
 Page 20.

PROGRAM
 Page 14.

MUTE
 Page 10.

SLEEP
 Page 17.

DISPLAY
 Page 38.

RAPID TUNE
 Page 10.

REC
 Pages 13.

PAUSE/SLOW
 Page 12.

STOP
 Page 12.

CHANNEL UP/DOWN Page 10.
SELECT UP/DOWN Page 9.

TRACKING UP/DOWN
 Page 12.

NUMBERED Keys
 Page 10.

SPEED
 Page 13.

ADD/DELETE
 Page 37.

CM SKIP
 Page 22.


SEARCH
 Page 22.

FAST FORWARD/SEARCH
 Page 12.

REWIND/SEARCH
 Page 12.

PLAY
 Page 12.

COUNTER RESET
 Page 23.

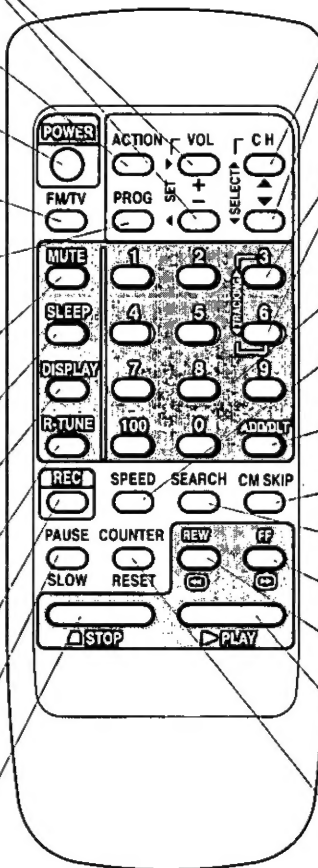

Kitchen (Easy-Find™) Remote Control <Model PV-C1350W only>

- This remote control has a magnet on the back so you can stick it to your refrigerator, etc. for convenience.
- The Kitchen remote control buttons work the same as the above remote control.

POWER
 Page 8.

STOP
 Page 12.


VOLUME UP/DOWN
 Page 10.

SET/BACKSPACE
 Page 9.

PLAY
 Page 12.

CHANNEL UP/DOWN
 Page 10.
SELECT UP/DOWN
 Page 9.


FM/TV
 Page 20.

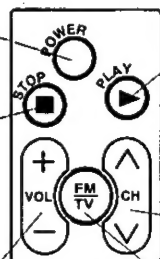


Location of Controls

Front View of the unit and Indicators on the Front Panel

Models PV-C1320 / PV-C1330W / PV-C1340 unit is shown here.

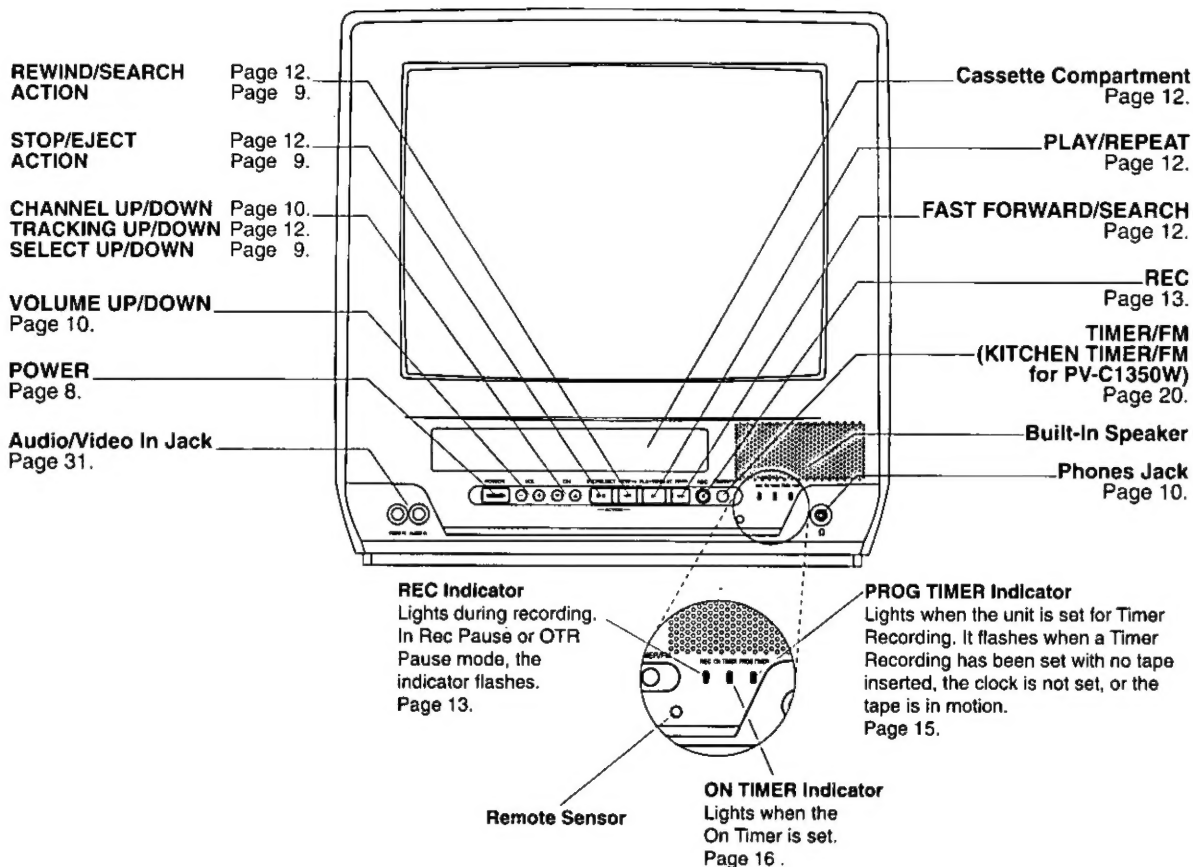

Rear View of the unit

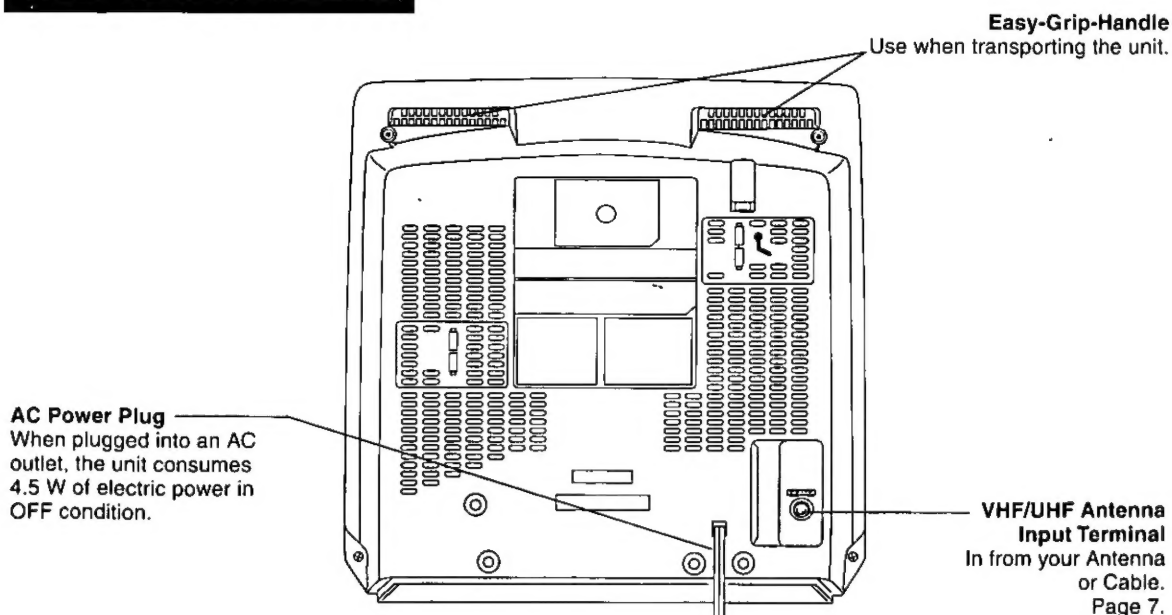

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus,
New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of
Puerto Rico, Inc. ("PSC")
Ave. 65 de Infantería. Km. 9.5
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985



Printed in Indonesia
LSQT0189A
S1199-0